


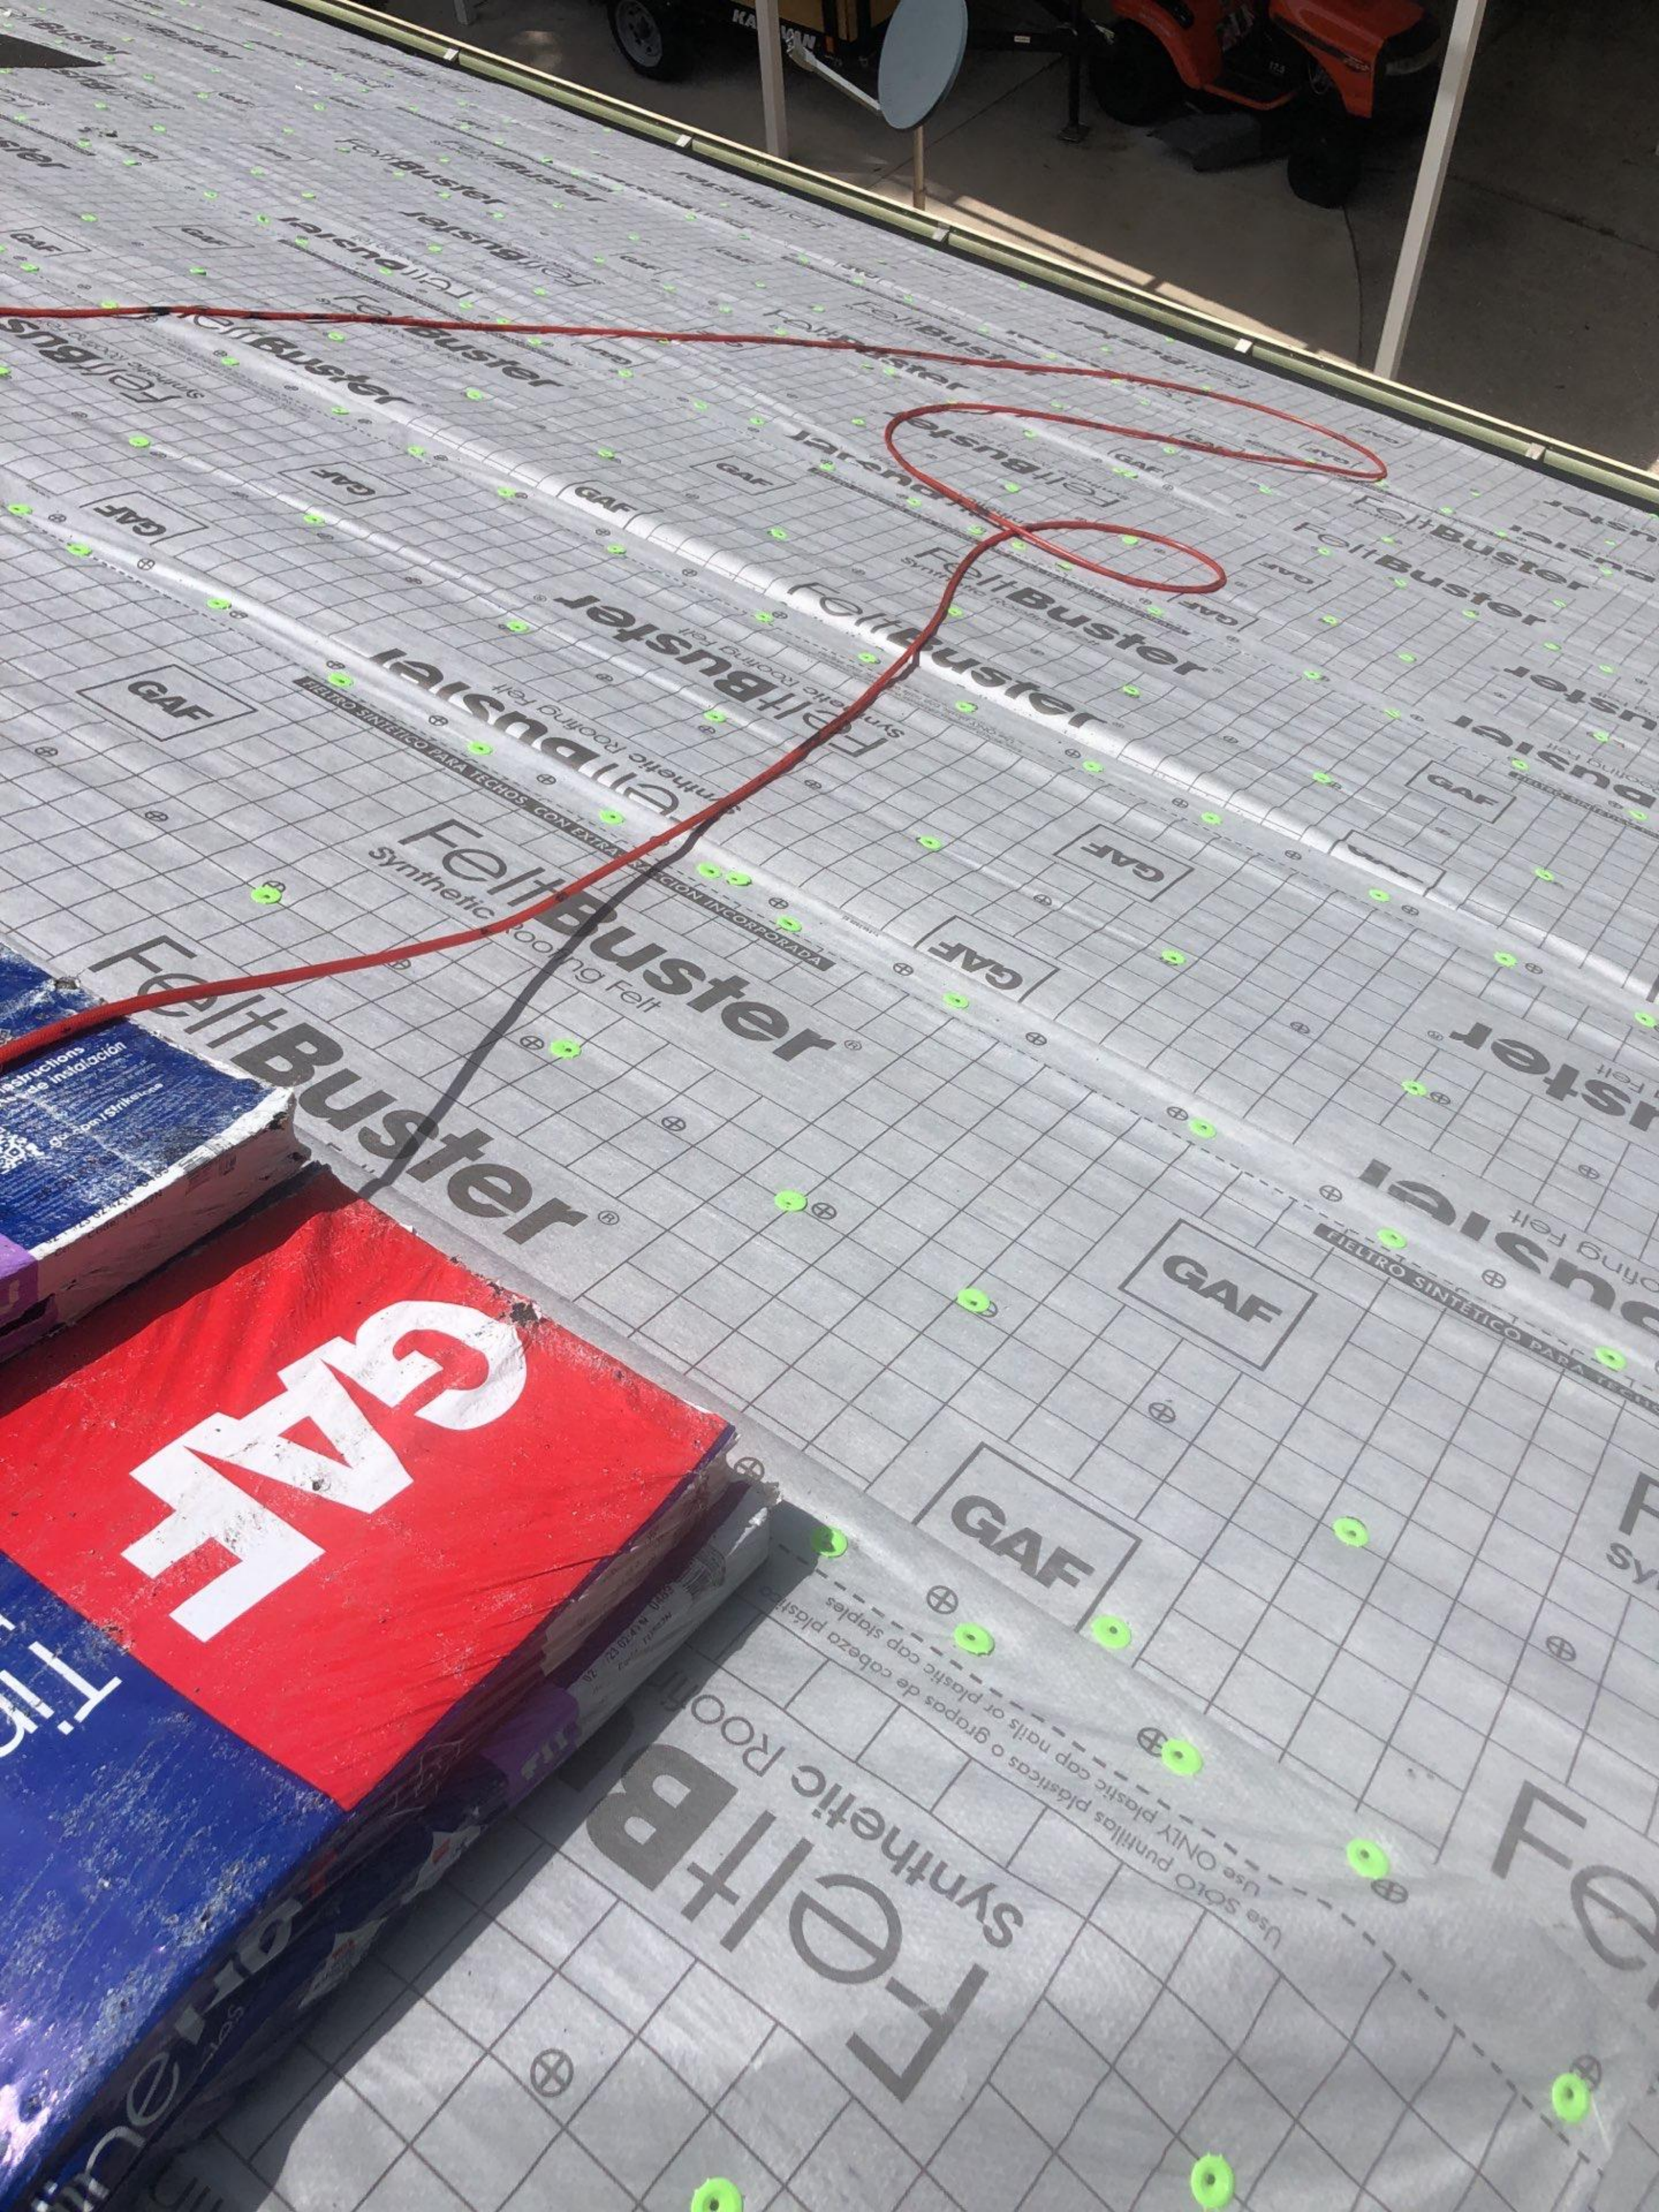



Instructions
de instalación
30-4pm 15110000

143

FeltBuster
Synthetic Roofing Felt

GAF

GAF

GAF

GAF

GAF

GAF

GAF

GAF

GAF

GAF

GAF

GAF

Use SOLO puntillas plásticas o grapas de cabeza plástica
Use ONLY plastic cap nails or plastic cap staples

FeltBuster
Synthetic Roofing Felt


FeltBuster
Synthetic Roofing Felt


FeltBuster
Synthetic Roofing Felt

FeltBuster
Synthetic Roofing Felt

FeltBuster
Synthetic Roofing Felt



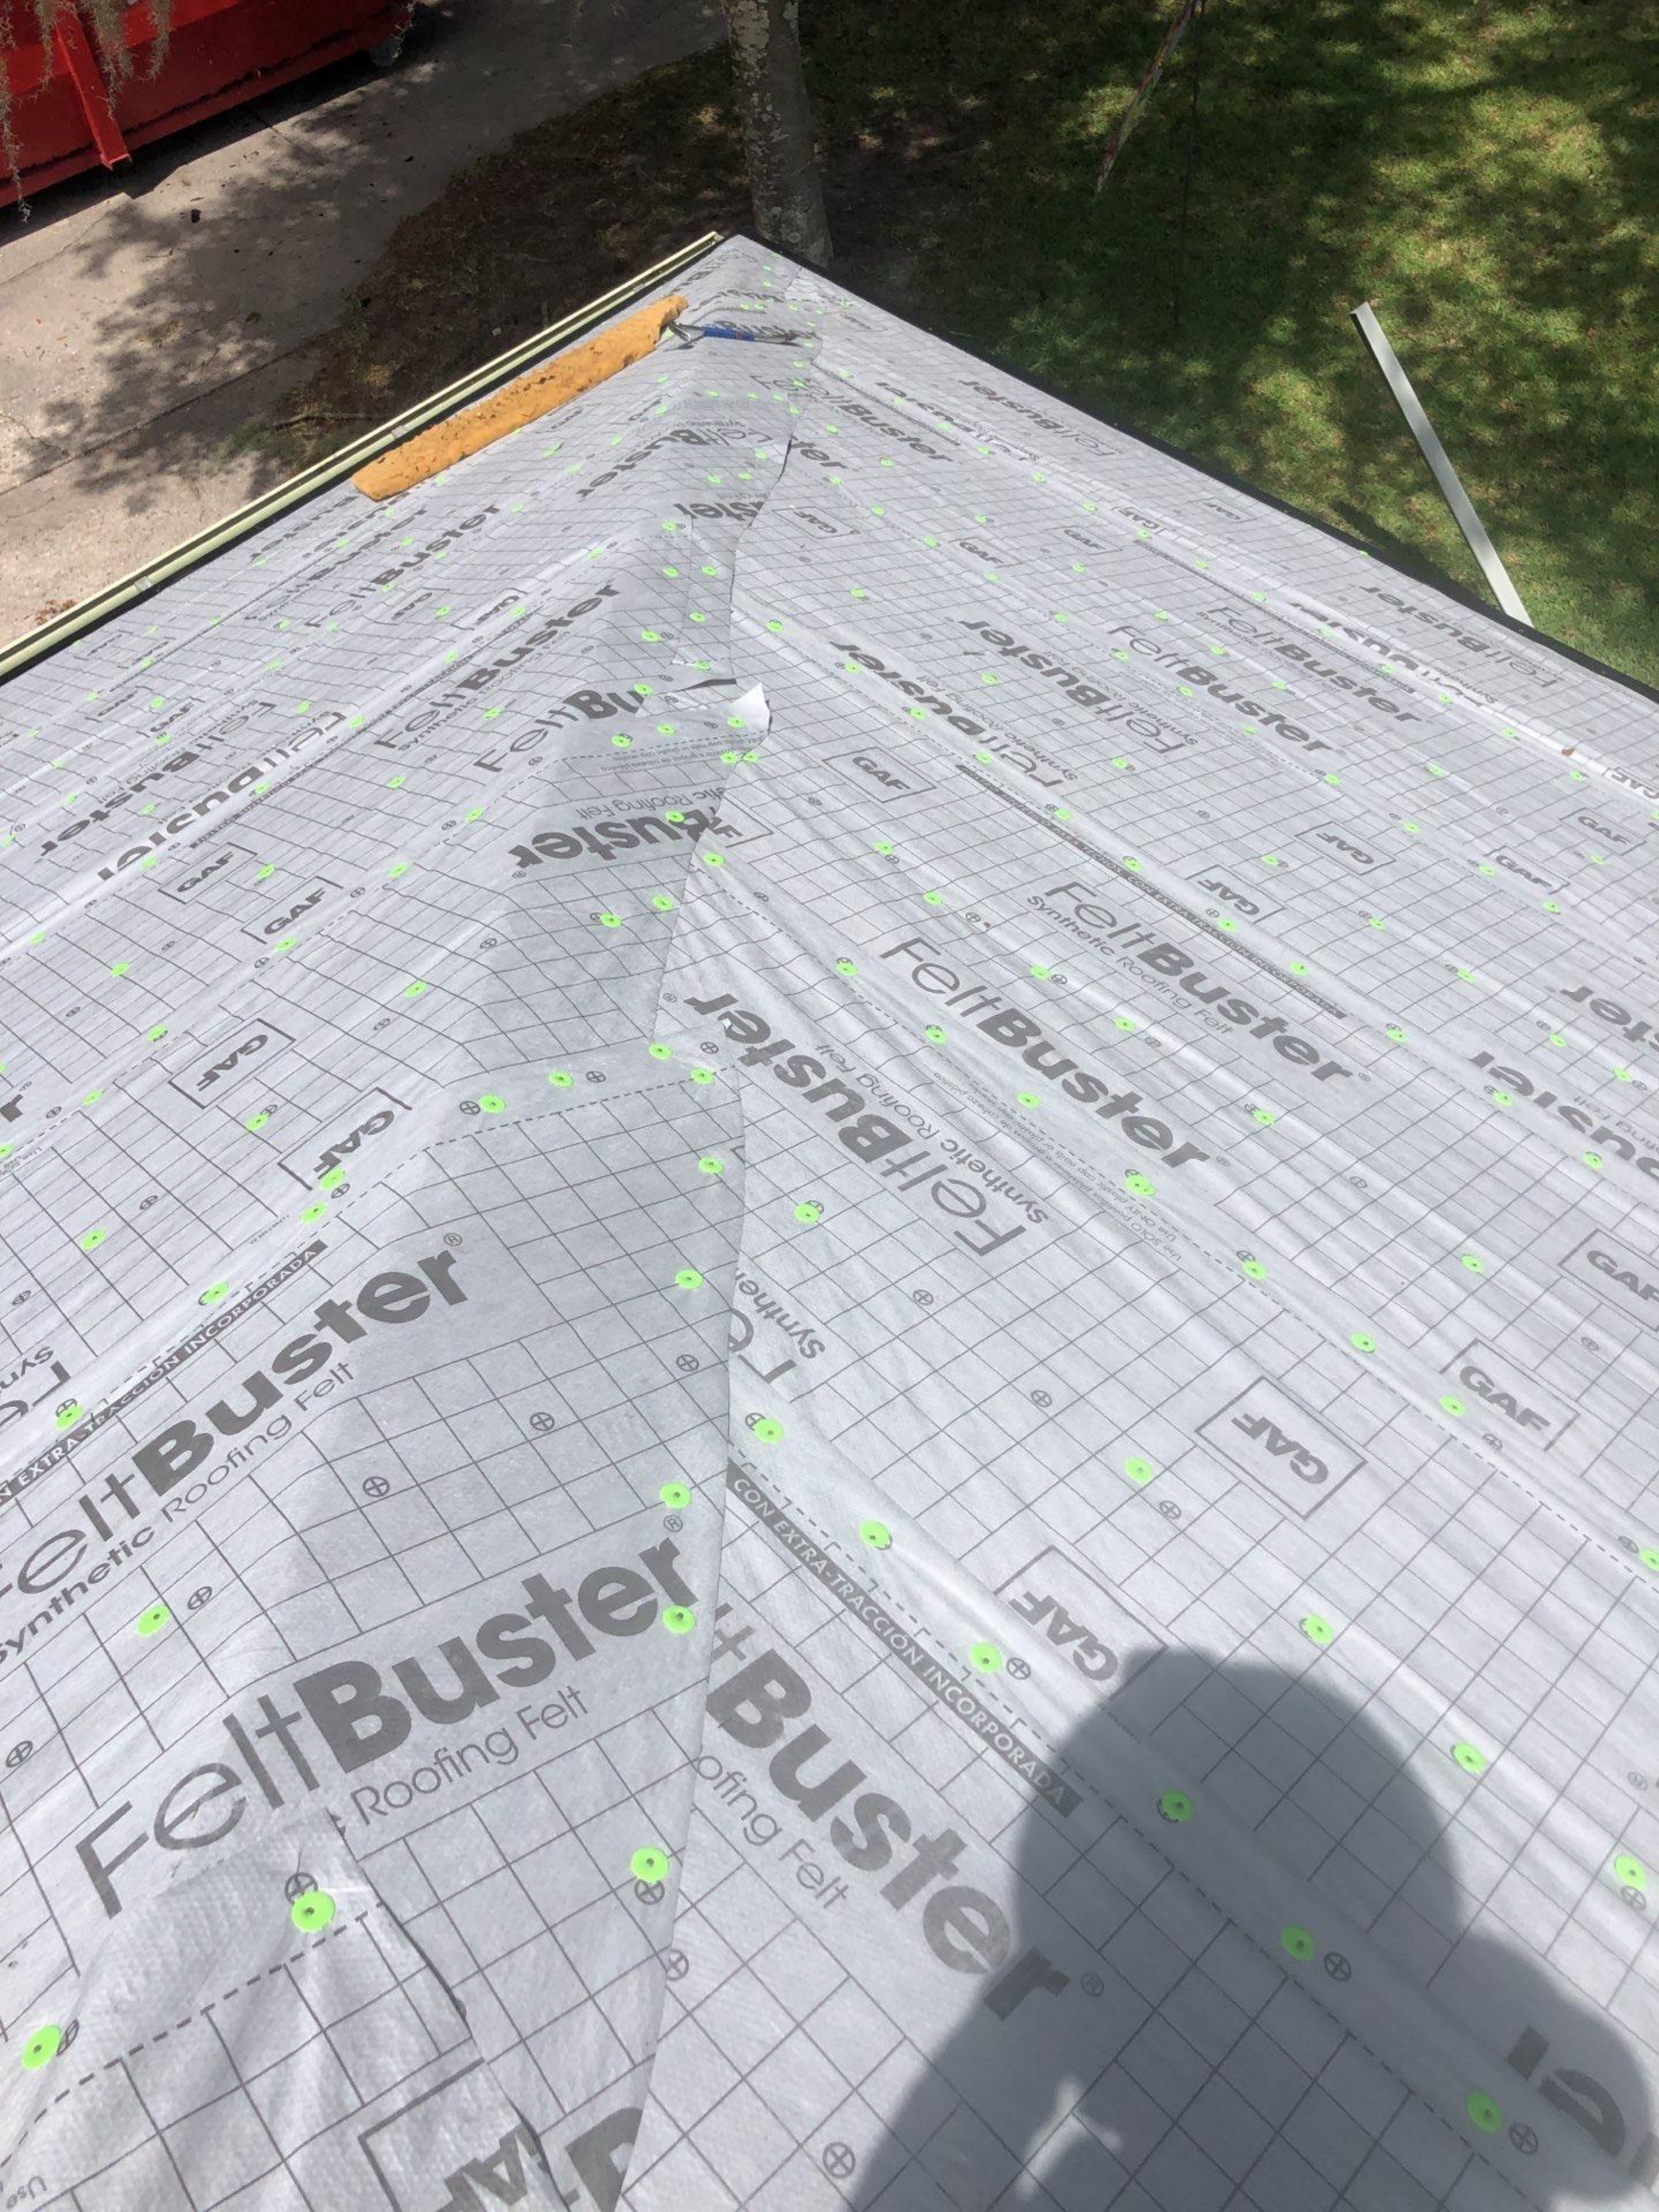

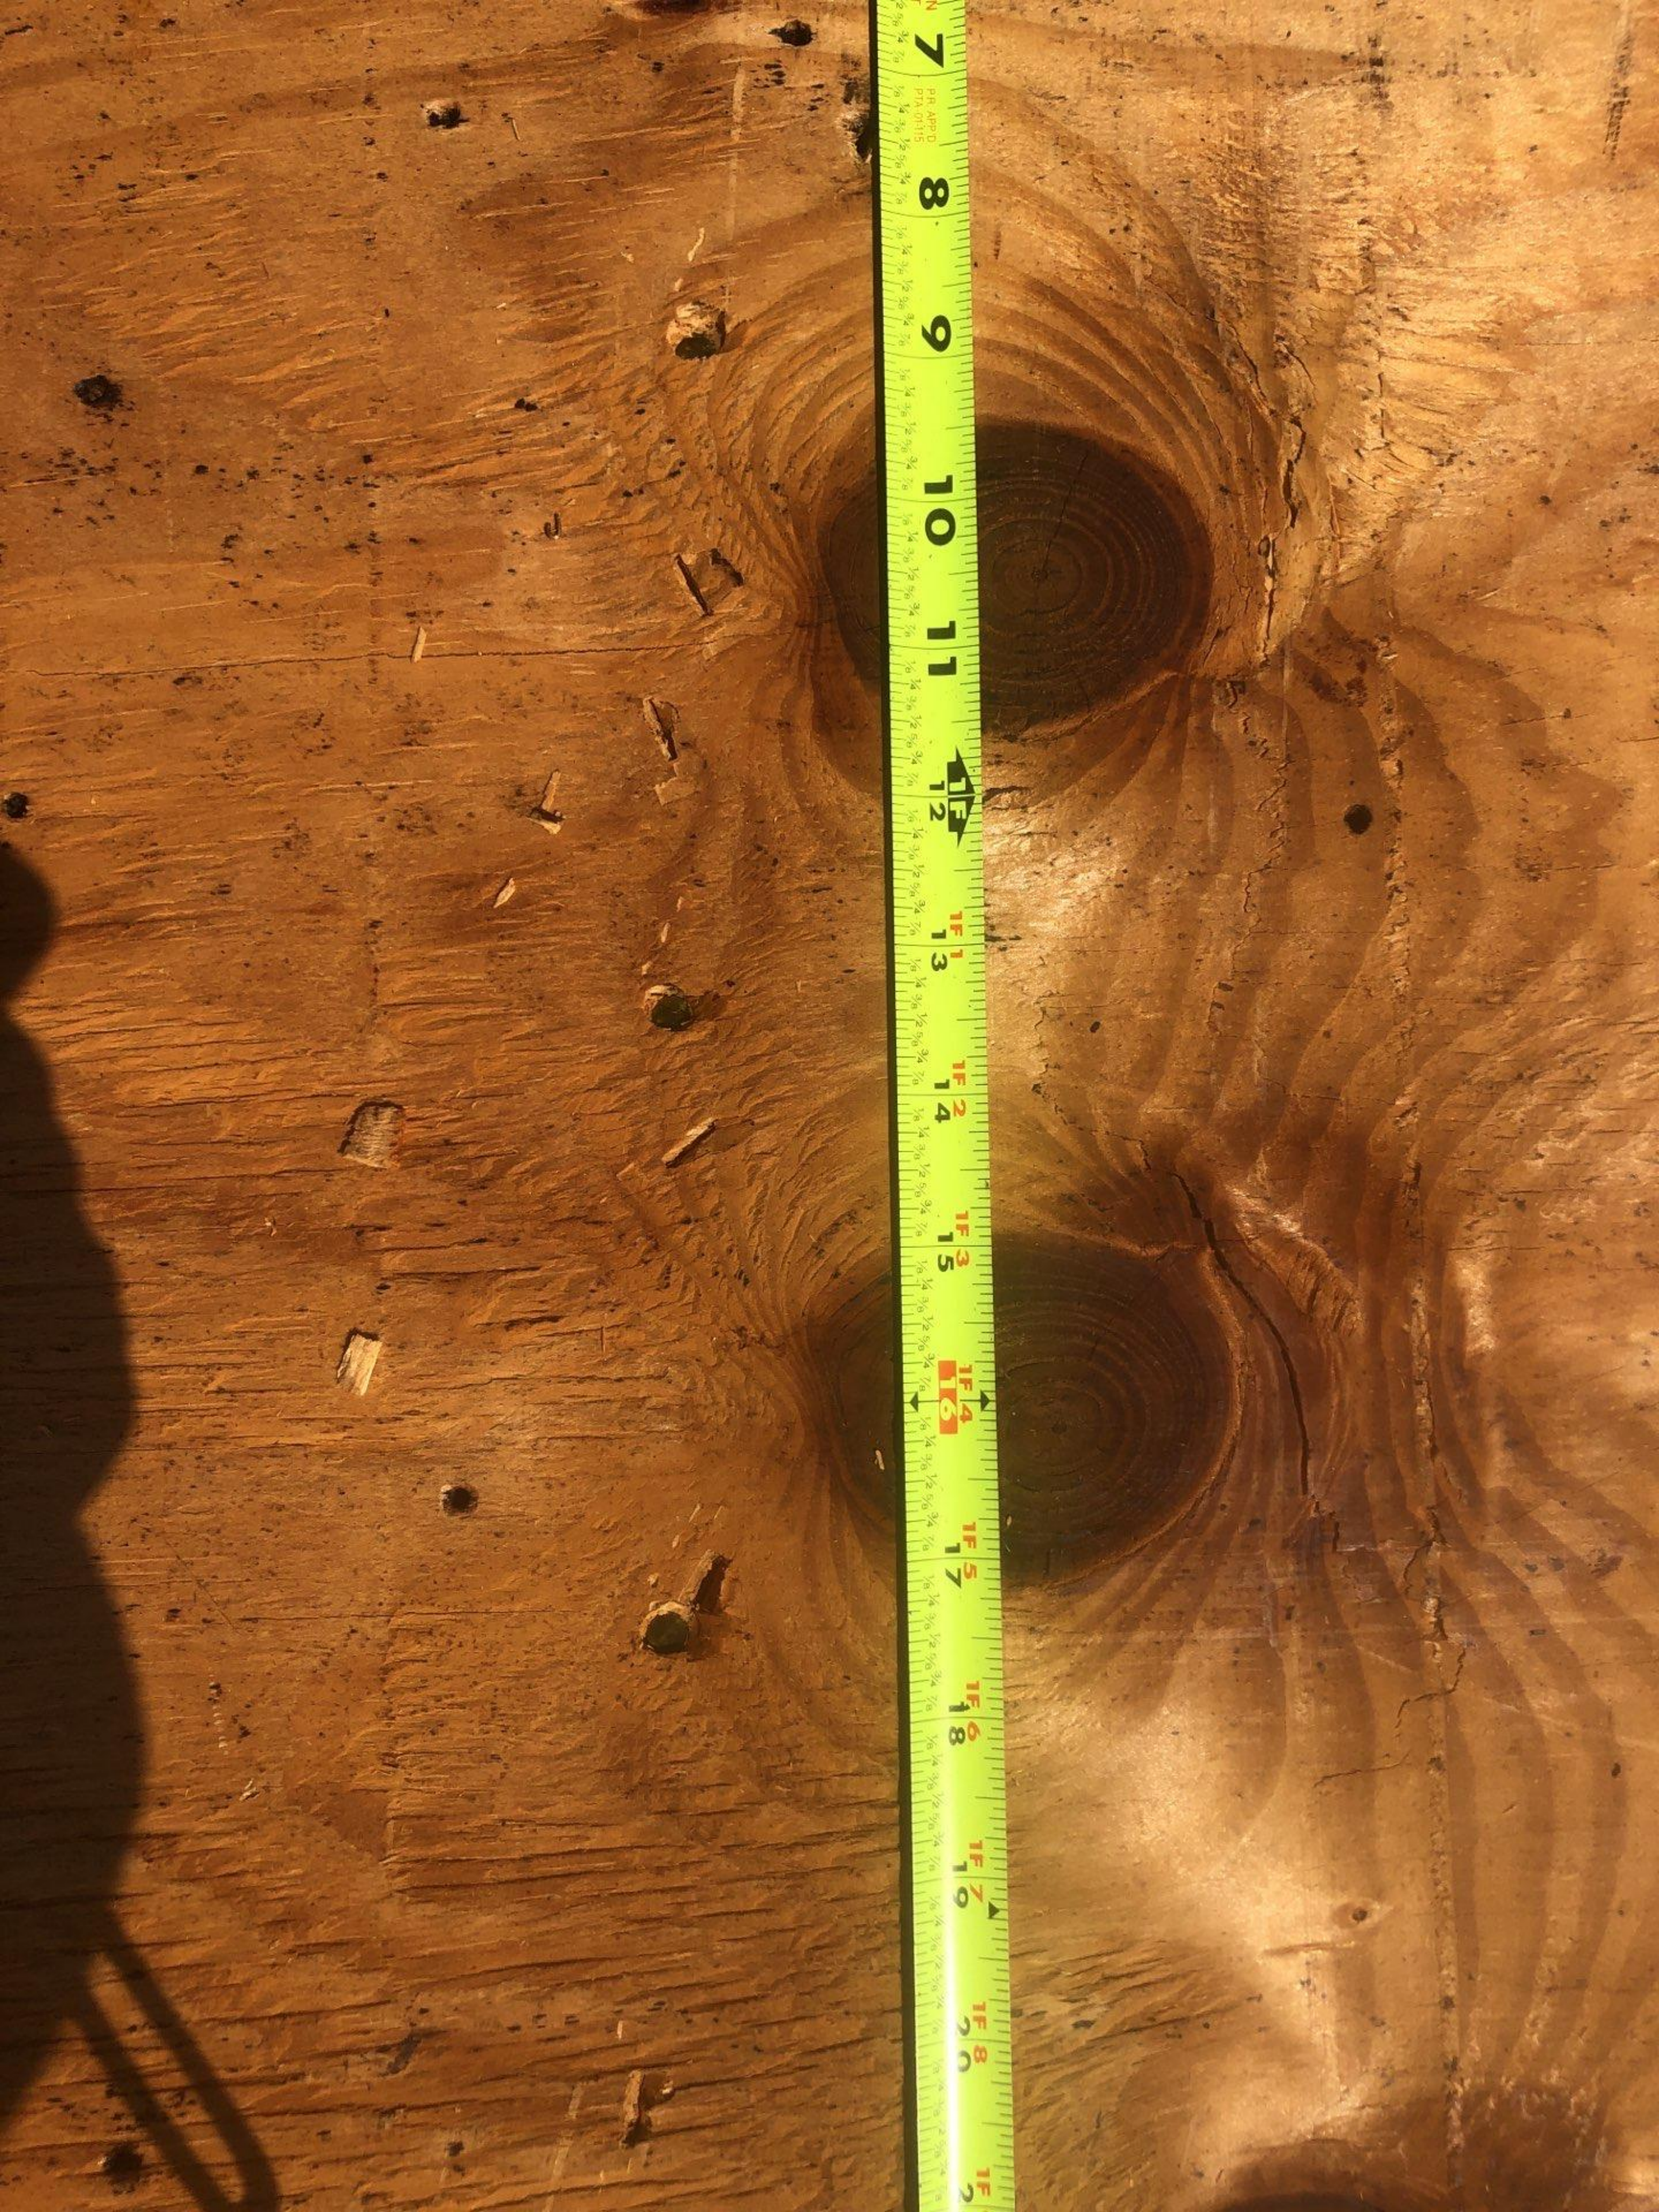



2 3 4 5 6 7 8 9 10 11 12
ft
12 in
SPEED-FAST
DURA NY-COAT
KOMELON
NYLON COAT
PR APP D
PIA-01115
TF 1
TF 2
TF 3