



FIREBLOCKING NOTES:

FIREBLOCKING SHALL BE INSTALLED IN WOOD FRAME CONSTRUCTION IN THE FOLLOWING LOCATIONS:


1. IN CONCEALED SPACES OF STUD WALLS AND PARTITIONS INCLUDING FURRED SPACES AT CEILING AND FLOOR LEVELS.
2. AT ALL INTERCONNECTIONS BETWEEN CONCEALED VERTICAL AND HORIZONTAL SPACES SUCH AS OCCUR AT SOFFITS, DROP CEILINGS, COVE CEILINGS, ETC.
3. IN CONCEALED SPACES BETWEEN STAIR STRINGERS AT THE TOP AND BOTTOM OF THE RUN.
4. AT OPENINGS AROUND VENTS, PIPES, DUCTS, CHIMNEYS AND FIREPLACES AT CEILING AND FLOOR LEVELS WITH PYROPANEL MULTIFLEX SEALANT
5. AT ALL INTERCONNECTIONS BETWEEN CONCEALED VERTICAL STUD WALL OR PARTITION SPACES AND CONCEALED SPACES CREATED BY AN ASSEMBLY OF FLOOR JOISTS, FIREBLOCKING SHALL BE PROVIDED FOR THE FULL DEPTH OF THE JOISTS AT THE ENDS AND OVER THE SUPPORTS.

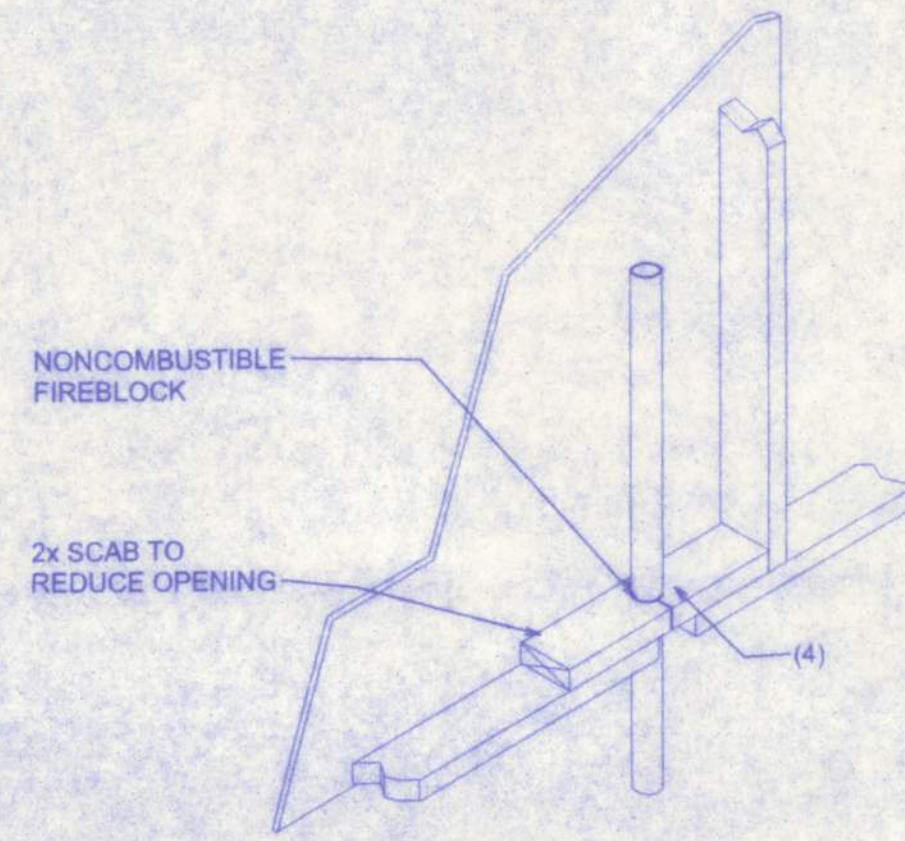


PENETRATIONS

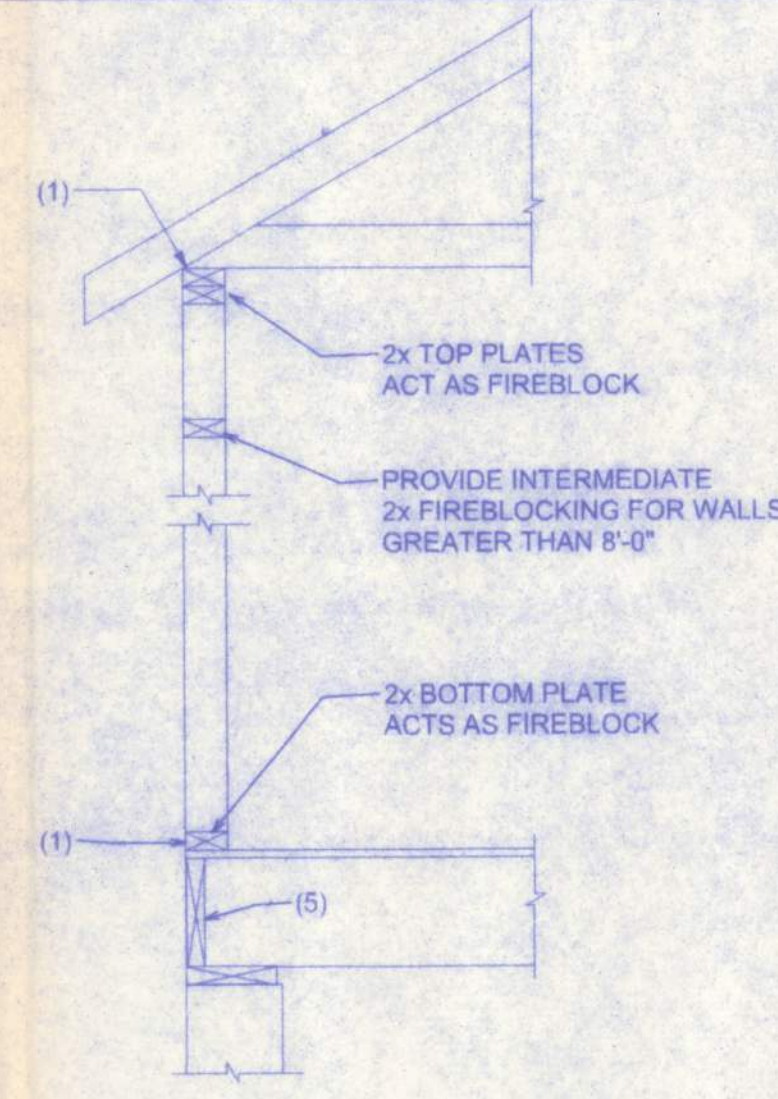

PLATFORM FRAMING

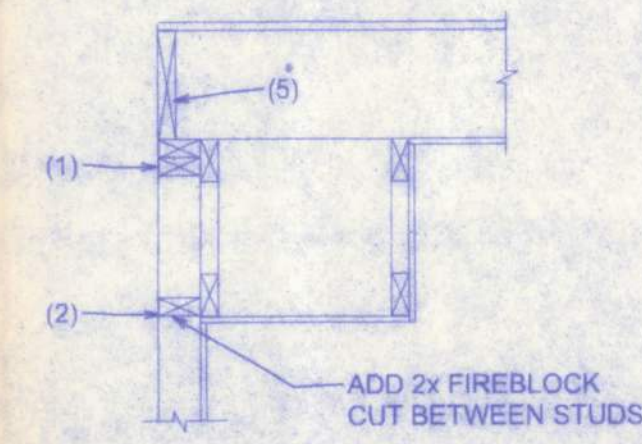

SOFFIT/DROPPED CLG.

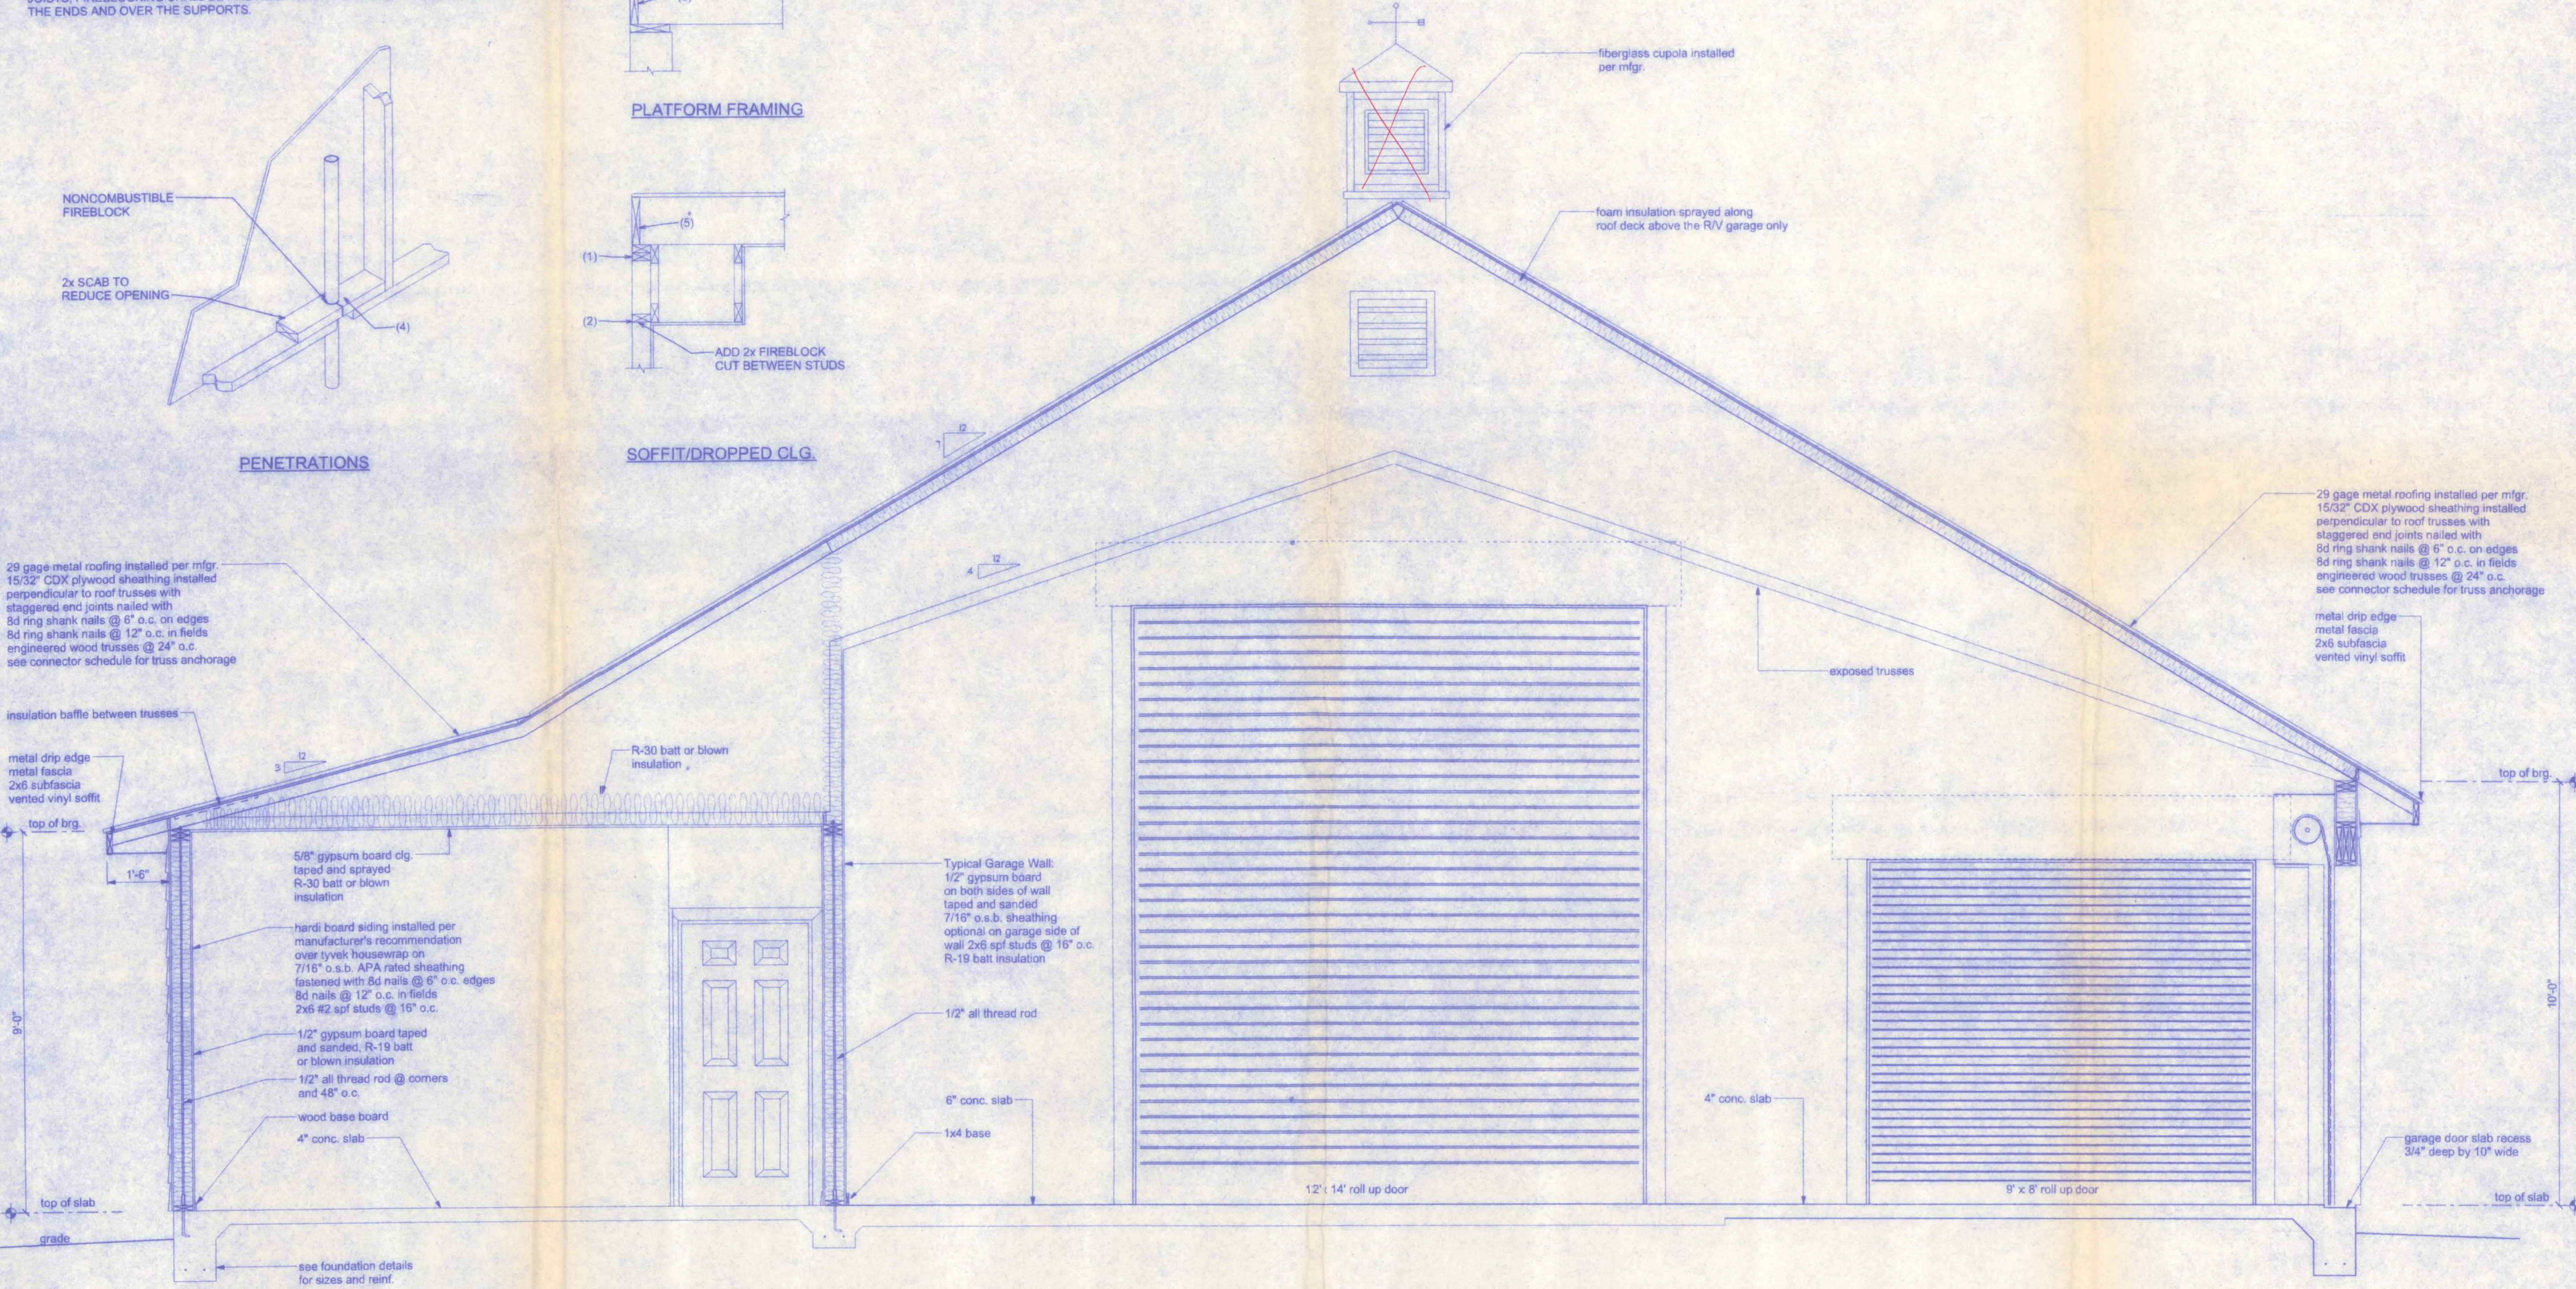


TYPICAL SECTION

SCALE: 1/2" = 1'-0"

W. H. Freeman
11/8/11
P.E. 95601

DALE AND MARY NANNY RESIDENCE

128 SW NASSAU STREET
LAKE CITY, FL 32025
(386) 758-4209

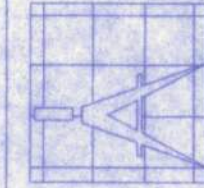

Freeman
Design Group, Inc.

DATE 11/8/11
DRAWN BY W.H.F.
APPROVED W.H.F.

REVISIONS

SHEET A-7
OF 10

PROJECT NO. 11.R036

CERTIFICATE OF AUTHORIZATION # 00006701