







XPS FANFOLDTM
Extruded Polystyrene




DURO-GUARDTM
THE WORLD'S BEST ROOFING


CHAMPROTM

DURO-LASTTM
THE WORLD'S BEST ROOFS

WORLD'S
BEST

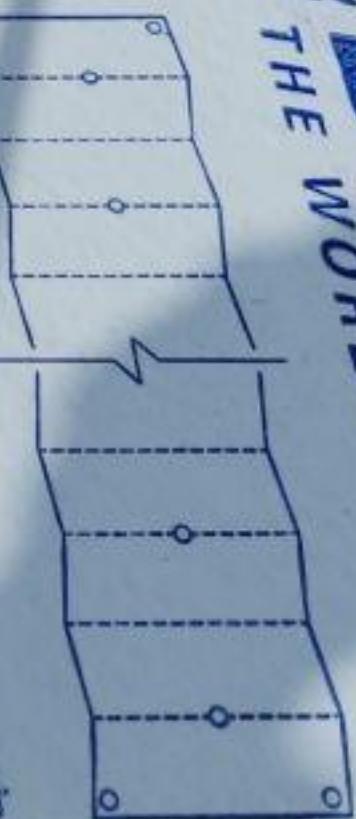

If factory tabs are run **parallel to the board**, a fastener in each corner and 48" on center and 48" on center will be required.
(See drawing A)

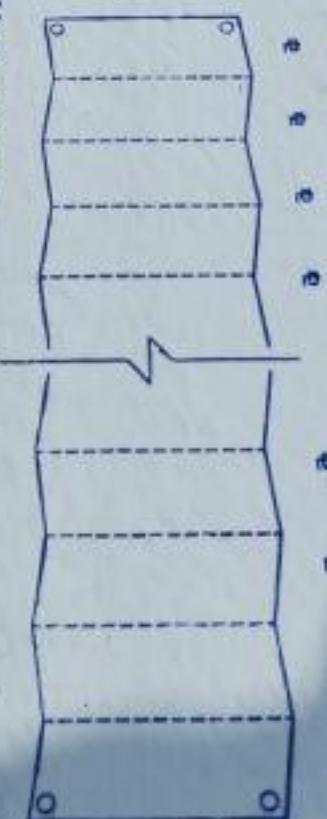

If factory tabs are run **perpendicular to the board**, a fastener in each corner is required. (See drawing B)

When fastening insulation or slip sheets, install fasteners flush with top surface of the insulation being careful not to break the facer or crush the insulation.

NOTE: Assembly "B" is not allowed for use with the tab system.

If you have any questions, call Duro-Last Roofing, Inc. at:

1-800-248-0280

XPS FANFOLDTM
Extruded Polystyrene

DURO-GUARDTM
XPS FANFOLDTM
Extruded Polystyrene





DURO-LAST
THE WORLD'S BEST ROOF

1-800-248-0280
DURO-GUARD™
XPS FANFOLD-XK
Extruded Polyethylene

XPS FANFOLD-XK
DURO-GUARD™
Extruded Polyethylene

ROOF
LAST

LAST
S BES