




PLANS PREPARED BY:
MARTY J. HUMPHRIES P.E. # 51976
7932 240TH ST., O'BRIEN, FL 32071

BLACKWELL RESIDENCE PLANS COLUMBIA COUNTY, FL

SHEET
6
OF
10


Install one Simpson model ABU66

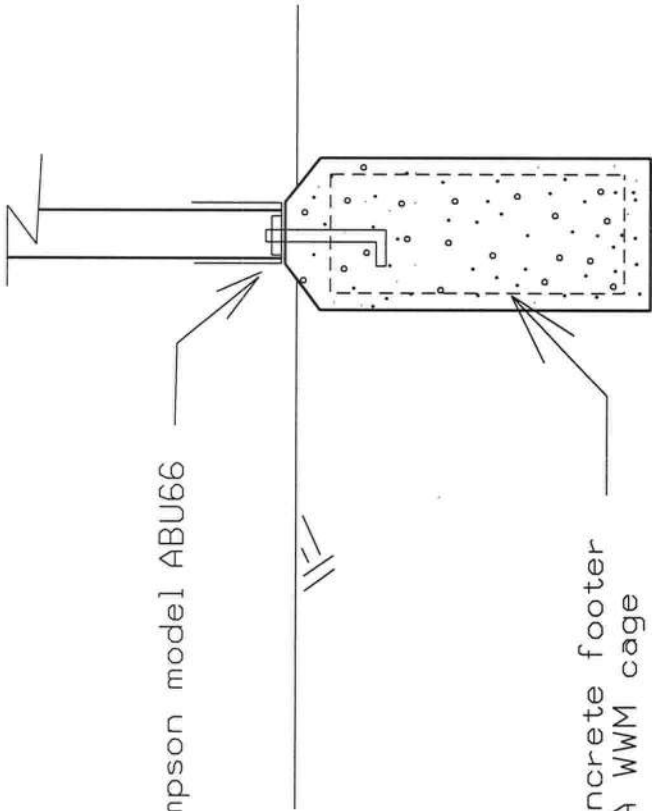

2' diameter x 3' deep concrete footer
(3000 psi) with 6x6x10 GA WWM cage

OPTIONAL DECK COLUMN FOOTER DETAIL (N.T.S.)

6"X6" PT column

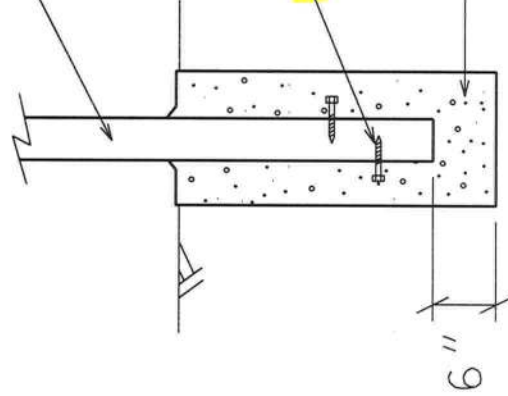

place 2 - 5/8" x 8" galv. lag bolts
in each column a minimum of
6" from bottom of column
(4" embedment into wood)

2' diameter by 4' deep
concrete footer(3000 psi)

REAR DECK COLUMN FOOTER DETAIL (N.T.S.)

3 1/2" drop end gable
truss with 2x4 SPF
Const. grade lookouts
@ 24" on center.

2-12d common
nails each location

Install one Simpson
H5 per lookout

2x4 SPF angle brace
nailed with 2-12d
common nails each
end and at crossings
with truss members.

2x4 SPF 8' long brace
spaced @ 6' on center
nailed with 2-12d common
nails at each truss

gypsum wall board

Install one Simpson model
LSTA18 - 4' on center

GABLE END BRACING DETAIL (N.T.S.)

NOTE: Gable end trusses shall be dropped 3 1/2" for construction of lookouts & overhang. Gable end trusses shall be constructed with vertical members 2' on center to receive sheathing.