Mobile Home Permit Worksheet

Installer : Kyle Joh	nson	License #_I	H11266571
Address of home being installed	743 SW Allison Ter	race Lake City	
Manufacturer Cav	/co	Length x width	60X28
I understand Late	er is a triple or quaderal Arm Systems ca all ties exceed 5 ft 4	Installer's initial	inder of home ome (new or used)
L	О П	7	
	$-\Pi$		
	Can Diagram		
	See Block	ing flan	·····
	$-\Pi$		-NN-/N-
		marriage wall piers within	2' of end of home per Rule 15C
			County Building D
			Reviewed for Code
			Compliance
			State of Florida

Αp	plication	Numbe	ər:		The second secon	Date):						
	New H	ome	Х	Used Home									
	Home Home	installed is install	I to the Ma led in acco	nufacturer's Ins ordance with Ru	stallation W lle 15-C	lanual	x						
	Single	wide		Wind Zone II	х	Wind Zon	e III	l					
	Double	wide	х	Installation De	cal#	12204)						
	Triple/Quad Serial #												
			PIER SF	PACING TABLE	E FOR USE	ED HOME	S						
	Load bearing capacity	Footer size (sq in)	16" x 16" (256)	22" x 22" (484)*	24" X 24" (576)*	26" x 26" (676)							
	1000		3'	4'	5'	6' 7' 8 8' 8' 8							
1	1500		4' 6"	6' 7' 8' 8'									
-	2000		6'	8'	8'	8'	8'	8'					
-	2500	pst	7' 6"	8'	8'	8'	8'	8'					
ŀ	3000 3500	psi	8' 8'	8' 8'	8'	8'	8'	8'					
Ļ	t internals	eted from		pier spacing tab	8'	8'	8'	8'					
	interpole		PIER PAI		ле.	POPU	JLAR PAD	SIZES					
	I-beam	pier pa	d size	23.5 x 3	31.5	D.	ad Size	SqIn					
				3			6 x 16	256					
	Perime	ter pier	pad size	or 17.5x7	25.5	1	6 x 18	288					
	Ollv	rer 10	55-11 or	doors + w	indows		5 x 18.5	342					
						16	16 x 22.5 360						
	(require	ed by the	e mfg.)			17 x 22 374							
				8 85 89	81		4 x 26 1/4	348					
		Draw th	e approxi	mate locations	of marriage								
		wan ope	to show th	oot or greater.	Use this		6 x 25 3/16						
		Symbol	to snow ti	ie piers.			2 x 25 1/2	446					
	List all r	marriage	e wall one	nings greater th	an 4 foot		4 x 24 6 x 26	576 676					
	and the	ir pier p	ad sizes b	elow	ian + 100t		0 X 20	0/0					
		pening		Pier pad size	_		ANCHOR	S					
	O,	0	La		3	4 ft	✓ 5 ft	~					
		JUL	3 lockin Pla	rary			FRAME TII	ES					
		- 6	Souch	9				e e					
			Pla	in			' of end of at 5' 4" oc						

TIEDOWN COMPONENTS

Longitudinal Stabilizing Device (LSD)
Manufacturer
Longitudinal Stabilizing Device w/ Lateral Arms
Manufacturer


OTHER TIES

Sidewall Longitudinal Marriage wall Shearwall Number

Mobile Home Permit Worksheet

POCKET PENETROMETER TEST
The pocket penetrometer tests are rounded down to psf or check here to declare 1000 lb. soil without testing.
$\times toa$ $\times toa$ $\times toa$
POCKET PENETROMETER TESTING METHOD 1. Test the perimeter of the home at 6 locations. 2. Take the reading at the depth of the footer. 3. Using 500 lb. increments, take the lowest reading and round down to that increment.
TORQUE PROBE TEST
The results of the torque probe test is inch pounds or check here if you are declaring 5' anchors without testing A test showing 275 inch pounds or less will require 5 foot anchors. Note: A state approved lateral arm system is being used and 4 ft. anchors are allowed at the sidewall locations. I understand 5 ft anchors are required at all centerline tie points where the torque test reading is 275 or less and where the mobile home manufacturer may requires anchors with 4000 lb holding capacity. Installer's initials
ALL TESTS MUST BE PERFORMED BY A LICENSED INSTALLER
Installer Name Kyla Jihnson
Date Tested ASSUMED OLIVER 1101 VUSZS 4451 Anchors +047her
Electrical
Connect electrical conductors between multi-wide units, but not to the main power source. This includes the bonding wire between mult-wide units. Pg
Plumbing
Connect all sewer drains to an existing sewer tap or septic tank. Pg Connect all potable water supply piping to an existing water meter, water tap, or other independent water supply systems. Pg

	Site Preparation
Debris a Water d	and organic material removed rainage: Natural Swale Pad Other
	Fastening multi wide units
Floor: Walls: Roof:	Type Fastener: 1995 Length: 7 Spacing: 20 Type Fastener: 1995 Length: 5 Spacing: 70 Type Fastener: 1995 Length: 7 Spacing: 70 For used homes a rMn. 30 gauge, 8" wide, galvanized metal strip will be centered over the peak of the roof and fastened with galv. roofing nails at 2" on center on both sides of the centerline.
	Gasket (weatherproofing requirement)
homes a a result of tape v	tand a properly installed gasket is a requirement of all new and used and that condensation, mold, meldew and buckled marriage walls are of a poorly installed or no gasket being installed. I understand a strip will not serve as a gasket. Installer's initials Sket factory Installed: Between Floors Yes Between Walls Yes Bottom of ridgebeam Yes
	Weatherproofing
Siding o	omboard will be repaired and/or taped. Yes Pg n units is installed to manufacturer's specifications. Yes e chimney installed so as not to allow intrusion of rain water. Yes
	Miscellaneous
Dryer ve Range d Drain lin	to be installed. Yes No
	aller verifies all information given with this permit workshee

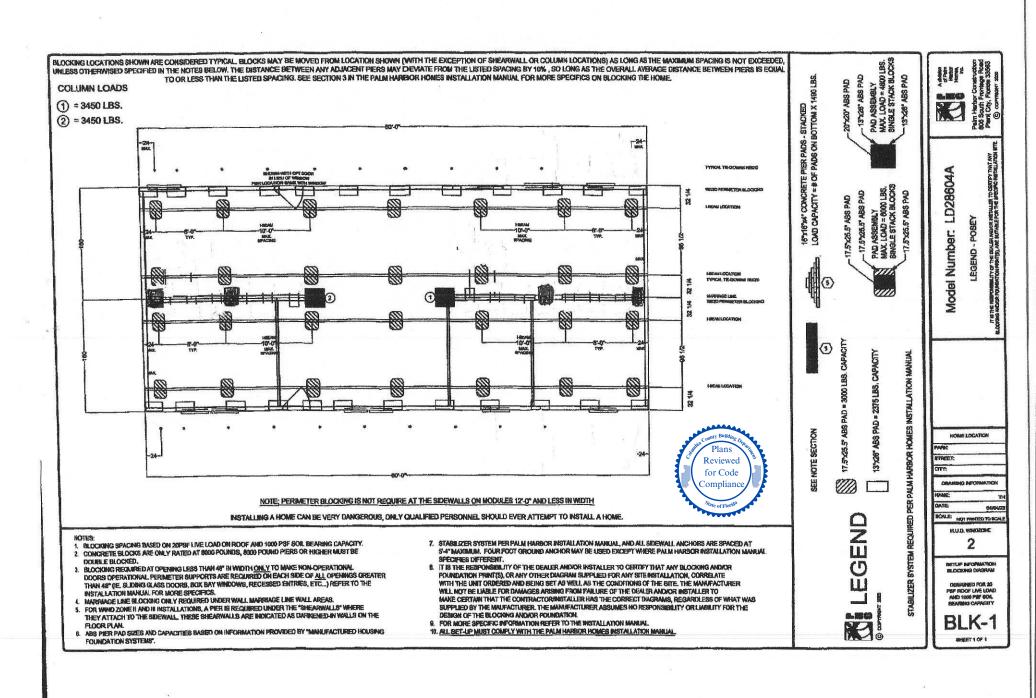

Order #: 6685 Label #: 122040	Manufacturer:	(Check Size of Home)
Homeowner:	Year Model:	Single
Address:	Length & Width:	Double
		Triple
City/State/Zip:	Type Longitudinal System:	HUD Label #:
Phone #:	Type Lateral Arm System:	Soil Bearing / PSF:
Date Installed:	New Home: Used Home:	Torque Probe / in-lbs:
Installed Wind Zone:	Data Plate Wind Zone:	Permit #:
Note:		

STATE OF FLORIDA INSTALLATION CERTIFICATION LABEL

122040

LABEL#

DATE OF INSTALLATION

KYLE JOHNSON

NAME

IH / 1126657 / 1

6685

LICENSE # ORDER #
CERTIFIES THAT THE INSTALLATION OF THIS MOBILE HOME IS
IN ACCORDANCE WITH FLORIDA STATUTES 320.8249, 320.8325
AND RULES OF THE HIGHWAY SAFETY AND MOTOR VEHICLES.

INSTRUCTIONS

PLEASE WRITE DATE OF INSTALLATION AND AFFIX LABEL NEXT TO HUD LABEL. USE PERMANENT INK PEN OR MARKER ONLY. COMPLETE INFORMATION ABOVE AND KEEP ON FILE FOR A MINIMUM OF 2 YEARS. YOU ARE REQUIRED TO PROVIDE COPIES WHEN REQUESTED.



. 107

467 Swan Ave ● Hohenwald, TN 38462 ● (800) 284-7437 ● www.olivertechnologies.com ● Fax (931) 796-8811

OLIVER TECHNOLOGIES, INC. INSTALLATION INSTRUCTIONS FOR FLORIDA MODEL 1101 "V" SERIES ALL STEEL FOUNDATION SYSTEM PAN & CONCRETE (revision 5/18)

PATENT# 6634150 & OTHER PATENT PENDING





467 Swan Ave ● Hohenwald, TN 38462 ● (800) 284-7437 ● www.olivertechnologies.com ● Fax (931) 796-8811

OLIVER TECHNOLOGIES, INC. FLORIDA INSTALLATION INSTRUCTIONS FOR THE MODEL 1101 "V" SERIES ALL STEEL FOUNDATION SYSTEM

MODEL 1101"V" (Steps 1-14) **LONGITUDINAL ONLY: Follow Steps 1-9** LATERAL ONLY: Follow Steps 1-3 and Steps 10-14 FOR CONCRETE APPLICATIONS: Follow Steps 15-18

ENGINEERS STAMP

ENGINEERS STAMP

1.50"

SPECIAL CIRCUMSTANCES: If the following conditions occur - STOP! Contact Oliver Technologies at 1-800-284-7437:

a) Pier height exceeds 48"

PIER HEIGHT

- c) Roof eaves exceed 16"
- e) Location is within 1500 feet of coast

- b) length of home exceeds 76'
- d) Sidewall height exceed 96"

INSTALLATION OF GROUND PAN

2. Remove weeds and debris in an approximate two foot square to expose firm soil for each ground pan (C).

1.50"

3. Place ground pan (C) directly below chassis I-beam. Press or drive pan firmly into soil until flush or below soil then install pier per manufacturer's instructions or per Florida Regs.

SPECIAL NOTE: The longitudinal "V" brace system may also serve as a pier under the home and should be loaded as any other pier. It is recommended that after leveling piers, and one-third inch (1/3") before home is lowered completely on to piers, complete steps 4 through 9 below then remove jacks.

INSTALLATION OF LONGITUDINAL "V" BRACE SYSTEM (Model 1101 L "V")


NOTE: WHEN INSTALLING THE LONGITUDINAL SYSTEM ONLY, A MINIMUM OF 2 SYSTEMS PER FLOOR SECTION IS REQUIRED. SOIL TEST PROBE SHOULD BE USED TO DETERMINE CORRECT TYPE OF ANCHOR PER SOIL CLASSIFICATION. IF PROBE TEST READINGS ARE BETWEEN 175 & 275 A 5 FOOT ANCHOR MUST BE USED. IF PROBE TEST READINGS ARE BETWEEN 276 & 350 A 4 FOOT ANCHOR MAY BE USED. USE GROUND ANCHORS WITH DIAGONAL TIES AND STABILIZER PLATES EVERY 5'4". VERTICAL TIES ARE ALSO REQUIRED ON HOMES SUPPLIED WITH VERTICAL TIE CONNECTION POINTS (PER FLORIDA REG.).

4. Choose one of the approved longitudinal tube installations; either Diagram A or B. Then select the correct square tube (E) length from the diagram for appropriate pier height at support location or cut and drill 1.5" square tube to achieve appropriate length.

(40° Min 45° Max.)	Tube Length	Tube Length	
7 3/4" to 25"	22"	18"	
24 3/4" to 32 1 /4"	32"	18"	
33" to 41"	44"	18"	
40" to 48"	54"	18"	

1.25"

Diagram A

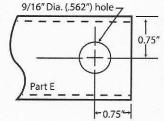

(40° Min 60° Max.)	Tube Length
14" to 18"	20"
18" to 25"	28"
24" to 35"	39"
30" to 40"	44"
36" to 48"	54"

Diagram B

- 5. Install (2) of the 1.50" square tubes (E) into the "U" bracket (J), insert carriage bolt and leave nut loose for final adjustment.
- 6. Place I-beam connector (F) loosely on the bottom flange of the I-beam.
- 7. (For Diagram A installation) Slide the selected 1.25" tube (E) into a 1.50" tube (E) and attach to I-beam connectors (F) and fasten loosely with bolt and nut. (For Diagram B installation) Attach the selected 1.5" tubes (E) to the I-beam connectors (F) and fasten loosely with bolts and nuts.
- 8. Repeat steps 6 through 7 to create the "V" pattern of the square tubes loosely in place.
- 9. Using standard hand tools tighten all nuts and bolts. (For Diagram A installation only, secure 1.25" and 1.50" tubes using four(4) 1 /4"-14 x 3/4" self-tapping screws in pre-drilled holes.)

INSTALLATION OF LATERAL TELESCOPING TRANSVERSE ARM SYSTEM (Model 1101 T "V")

THE MODEL 1101 "V" (LONGITUDINAL & LATERAL PROTECTION) ELIMINATES THE NEED FOR STABILIZER PLATES & FRAME TIES. NOTE: THE USE OF THIS SYSTEM REQUIRES VERTICAL TIES SPACED AT 5'4".

FOUR FOOT (4') GROUND ANCHOR MAY BE USED EXCEPT WHERE THE HOME MANUFACTURER SPECIFIES DIFFERENT.

- 10. Install remaining vertical tie-down straps and 4' ground anchors per home manufacturer's instructions. NOTE: Centerline anchors to be sized according to soil torque condition. Any manufacturer's specifications for sidewall anchor loads in excess of 4,000 lbs. require a 5' anchor per Florida Code.
- 11. Select the correct square tube brace (H) length for set-up lateral transverse at support location. The lengths come in either 60" or 72" lengths. (With the 1.50" tube as the bottom tube, and the 1.25" tube as the inserted tube.)
- 12. Install the 1.50 transverse brace (H) to the ground pan connector (D) with bolt and nut.
- 13. Slide 1.25" transverse brace into the 1.50" brace and attach to adjacent I-beam connector (I) with bolt and nut.
- 14. Secure 1.50" transverse arm to 1.25" transverse arm using four (4) 1 /4" 14 x 3/4" self-tapping screws in pre-drilled holes.

Page

DUNIER Technologies, Inc.



467 Swan Ave ● Hohenwald, TN 38462 ● (800) 284-7437 ● www.olivertechnologies.com ● Fax (931) 796-8811

INSTALLATION USING CONCRETE RUNNER/ FOOTER

- 15. A concrete runner, footer or slab may be used in place of the steel ground pan.
 - a) The concrete shall be minimum 2500 psi mix
 - b) A concrete runner may be either longitudinal or transverse, and must be a minimum of 8" deep with a minimum width of 16 inches longitudinally or 18 inches transverse to allow proper distance between the concrete bolt and the edge of the concrete (see below).
 - c) Footers must have minimum surface area of 441 sq. in. (I.e. 21" square), and must be a minimum of 8" deep.
 - d) If a full slab is used, the depth must be a 4" minimum . Special inspection of the system bracket installation is not required. Footers must allow for at least 4" from the concrete bolt to the edge of the concrete.

NOTE: The bottom of all footings, pads, slabs and runners must be per local jurisdiction.

LONGITUDINAL: (Model 1101 LC "V")

16. When using Part# 1101-W-CPCA (wetset) simply install the bracket in runner/footer OR When installing in cured concrete use Part# 101-D-CPCA (dryset). The 1101 (dryset) CA bracket is attached to the concrete using (2) 5/8"x3" concrete wedge bolts (Simpson part # S162300H 5/8" X 3" or Powers equivalent). Place the CA bracket in desired location. Mark bolt hole locations, then using a 5/8" diameter masonry bit, drill a hole to a minimum depth of 3". Make sure all dust and concrete is blown out of the holes. Place wedge bolts into drille holes, then place 1101 (dry set) CA bracket onto wedge bolts and start wedge bolt nuts. Take a hammer and lightly drive the wedge bolts down by hitting the nut (making sure not to hit the top of threads on bolt). The sleeve of concrete wedge bolt needs to be at or below th top of concrete. Complete by tightening nuts.


LATERAL: (Model 1101 TC "V")


- 17. For wet set (part # 1101-W-TACA) installation simply install the anchor bolt into runner/footer. For dry set installation (part # 1101-D-TACA) mark bolt hole locations, then using a 5/8" diam. masonry bit. drill a hole to a minimum depth of 3". Make sure all dust and concrete is blown out of the hole. Place wedge bolts (Simpson part #S162300H 5/8" X 3" or Powers equivalent) into (D) concrete dry transverse connector and into drilled hole. If needed, take a hammer and lightly drive the wedge bolts down by hitting the nut (making sure not to hit the top of threads on bolt), then remove the nut. The sleeve of concrete wedge bolt needs to be at or below the top of concrete.
- 18. When using part# 1101 CVW (wetset) or 1101 CVD (dryset), install per steps 17 & 18.


Notes:

- 1. LENGTH OF HOUSE IS THE ACTUAL BOX SIZE
- 2. —= LOCATION OF TRANSVERSE BRACING ONLY
- 3 🛛 = LOCATION OF LONGITUDINAL BRACING ONLY
- 4. F- = TRANSVERSE AND LONGITUDINAL LOCATIONS


ALL WIDTHS AND LENGTHS UP TO 52'

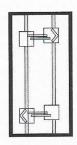


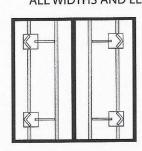


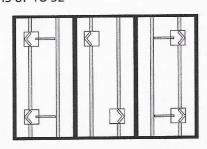

ALL WIDTHS AND LENGTHS OVER 52' TO 80"

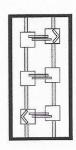


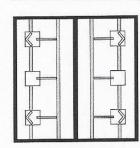

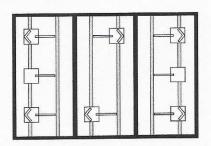

HOMES WITH 5/12 ROOF PITCH REQUIRE: PER FLORIDA REGULATIONS 6 systems for home lengths up to 52' and 8 systems for homes over 52' and up 80'.

PATENT# 6634150 & OTHER PATENT PENDING

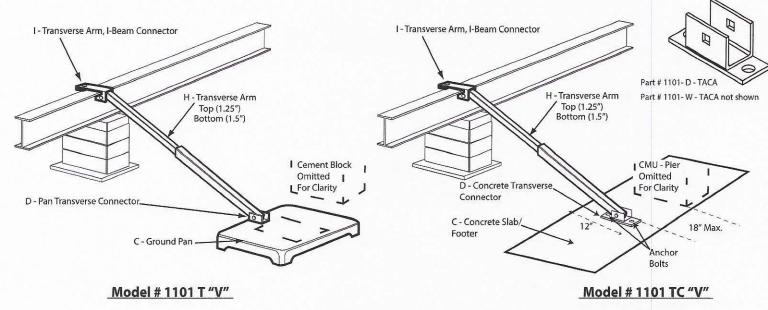

Florida approved 4' ground anchors may be used in all locations except where home manufacturers specifications for sidewall straps are in excess of 4,000 lbs. These locations require a 5' anchor. Per Florida code.

C = GROUND PAN / CONCRETE FOOTER OR RUNNER

D = GROUND PAN / CONCRETE U BRACKETS TRANSVERSE CONNECTOR (connects with grade 5 - 1/2" x 2" 1/2" carriage bolt and nut)


E = TELESCOPING V BRACE TUBE ASSEMBLY (1.5" TUBE BOTTOM AND 1.25" TUBE INSERT) OR 1.5" TUBE

F = "V" BRACE I-BEAM CONNECTOR ASSEMBLY

H = TELESCOPING TRANSVERSE ARM ASSEMBLY

I = TRANSVERSE ARM I-BEAM CONNECTOR (connects with grade 5 - 1/2" x 2" 1/2" carriage bolt and nut)

J = V PAN BRACKET (connects with grade 5 - 1/2" x 2" 1/2" carriage bolt and nut)

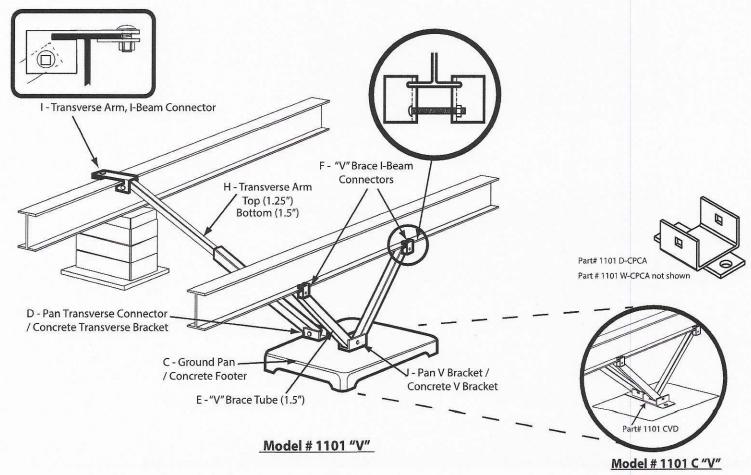



State of Florida DEPARTMENT OF HIGHWAY SAFETY AND MOTOR VEHICLES

TALLAHASSEE, FLORIDA 32399-0500

FRED O. DICKINSON, III Executive Director June 17, 2002

Mr. Lon Larson, General Manager Manufactured Housing Foundation Systems, Inc. A Division of Oliver Technologies Post Office Box 9 Hohenwald, Tennessee 38462

Dear Mr. Larson:

We wish to acknowledge receipt of your specifications and test results certifying that your 1055-20 Flex Free ABS Plastic Pad listed below complies with the specifications and regulations set by the Department of Highway Safety and Motor Vehicles, Rules 15C-1.0105, 15C-1.0107 and 15C-1.0108, Florida Administrative Code.

Based on the information submitted to this bureau, the following product is listed for sale and use in Florida when the installation instructions showing the way the pads were tested, are provided.

MODEL #	IDENTIFICATION	DESCRIPTION	<u>AREA</u>
1055-20	Flex Free ABS Plastic Pad	23.25" x 31.25"	4.698 sq. ft.

MAXIMUM PIER LOADS IN POUNDS BASED ON SOIL VALUES

PAD CONFIGURATION	PAD AREA	LOAD				
Pad 1	4.698 sq. ft.	1000 lb. soil - 4,698 2000 lb. soil - 9.396				

NOTES: 1) INSTALLER IS RESPONSIBLE FOR DETERMINING SOIL BEARING CAPACITY.

- THE PAD WAS TESTED FOR SINGLE AND DOUBLE BLOCK CONFIGURATION.
- 3) 8,000 LB, LOAD AND ABOVE REQUIRE DOUBLE BLOCK CONFIGURATION.

If you have any questions, please advise at (407) 623-1340.

Sincerely,

Phil Bergelt, Program Manager Bureau of Motor Home and Recreational Vehicle Construction

Division of Motor Vehicles

PRB:srb



State of Florida DEPARTMENT OF HIGHWAY SAFETY AND MOTOR VEHICLES

TALLAHASSEE, FLORIDA 32399-0500

FRED O. DICKINSON, III

October 27, 1999

Mr. Lon Larson, General Manager
Manufactured Housing Foundation Systems
A Division of Oliver Technologies
562 Glenheather Drive
San Marcos, California 92069

Dear Mr. Larson:

We wish to acknowledge receipt of your print specifications and test results certifying your Adjustable Outrigger listed below complies with the Federal Manufactured Construction and Safety Standards, § 3280.305 and § 3280.401 and with the rules and regulations set forth by the Department of Highway Safety and Motor Vehicles, Florida Administrative Rule Code 15C-1.01105.

Based on the information submitted to the bureau, the following product is listed for use in Florida when the installation instructions showing the way the outrigger was tested, are provided.

MODEL#	INDENTIFICATION	DESCRIPTION
1055-11	Adjustable Outrigger	Bracket, Pipe, & Screw Adjustment

NOTE: The outrigger was tested on September 19, 1999, for an allowable load of 1700 pounds.

If you have any questions, please advise at (850) 413-7600.

Sincerely,

Phil Bergelt, Program Manager
Bureau of Mobile Home and

Recreational Vehicle Construction


Division of Motor Vehicles

PB:bsc

OLIVER TECHNOLOGIES, INC.

Adjustable Outrigger Installation Instructions MODEL # 1055-11

- 1. Locate the floor joist that requires support.
- 2. Mark the I-Beam directly under the floor joist to align the outrigger.
- 3. Adjust the nut on the threaded rod so it clears the frame flange for easy adjustment.
- 4. Set the threaded rod in the pipe and against the frame.
- 5. Set the notched end of the thrust bracket into the end of the pipe and secure it with 5 # 12 x 2" screws to the floor joist. The thrust bracket should be approximately 6" from the outside rim joist.
- 6. Bottom board and insulation should be between the bracket and the joist.
- 7. For minor adjustments align the door and window openings by tightening or loosening the adjustment nut. For all other adjustments use a hydraulic jack to raise the floor joist before installation of the outrigger.

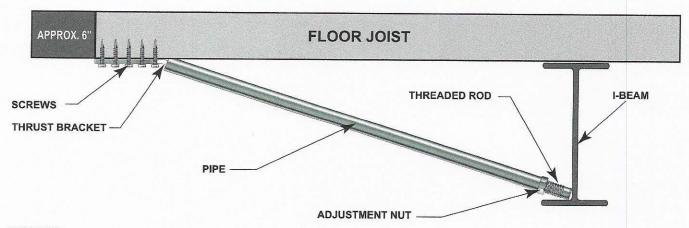

NOTES:

*REMOVE OUTRIGGER WHEN HOME IS BEING TRANSPORTED

*SPECIFY WIDTH OF HOME WHEN ORDERING OUTRIGGER. PIPE MAY BE CUT TO FIT

*THE ADJUSTABLE OUTRIGGERS SHALL ONLY BE USED ON HOMES FOR OPENINGS UP TO:

Listing # 1055-11 Patent # 6.334.279

6' ON 20 LB ROOF LOAD

4' ON 30 LB ROOF LOAD

3' ON 40 LB ROOF LOAD

*WHEN ADJUSTABLE OUTRIGGERS ARE USED FOR DOOR AND WINDOW SUPPORTS, THEY MUST BE INSTALLED ON THE CLOSEST FLOOR JOIST UP TO 16" FROM THE OUTSIDE EDGE OF THE OPENING

*DO NOT INSTALL ADJUSTABLE OUTRIGGER AT LOCATIONS WHERE THE HOME MANUFACTURER INDICATES A LOAD IN EXCESS OF 1,700 LBS.
*THE ADJUSTABLE OUTRIGGER MUST BE USED ON A MINIMUM 10" I-BEAM AND BE PLACED WITHIN 4' OF A MAIN FRAME SUPPORT PIER OR FRAME CROSSMEMBER.





		L	Z		Z	S	b			
		S6F	?	S	Z	. E				
		2	r a	gcmgcc						
I A. AqG:	T kXq6NX71. kE		J.	3 3 3						
1. "			b	n						
2. k								nN		
	b								f	
	n									
3. N d						i				n
4. 8	" x)		n							
5. k										
		n								
6. "				uncon	nfined compres	sive strength of	the soil. 9			
		, www n		n						
. 1 XAkB										
1. "					, fmn					
2. k) - "		hfm						n	
rz (k2	2C		hfme							
3. N					n					
4. k										
	n									
	x)								n	
,	N c"			, www N) (n9	b		
u, u	I	nO N	۱ x	v , fT nO	iN			P, fT	n	
7. "		uwww N) 0			c 95	, whhi, Tb, whh	iPb, whhiv	, whhi,	. n	
8. 9		. www b	. www			n				
9. Any p	ad may be stacke	d directly on top	of an ide	ntical pad. [·]	The second pa	d should also b	e installed	flat side do	wn. Such	a configuration

2GR kTyA	TR . 1 d	2GR Gq AG	3	t ccc 2 k	(L	t gcc 2 kl	-	Hccc 2k	L	Hgcc 2k	L	mccc 2k	L
(, g , mth	, whhiu.	umm n	n	uww	n	. www	n	Twww	n	hwww	n	gww	n
(, v uu	, whhi, g	.gw n	n	uhww	n	. vhw	n	hwww	n	guhw	n	vhww	n
(, vrh uurh	, whhiu,	.mT n	n	uggv	n	Twww	n	h T	n	gggv	n	mwww	nt
(, vrh uhrh	, whhi, v	T. u n	n	. WWW	n	Thww	n	gww	n	vhww	n	Pwww	nt
(u, uP	, whhiuu	hvg n	n	Twww	n	gww	n	mwww	nt	, www	nt	, uww	nt

gvh

n n

2GR kTyA		TR . 1 d	2GR Gq AG		t ccc 2kL		t gcc 2kL		Hccc 2kL		Hgcc 2kL		mccc 2kL	
)	, g , g	, whhi, T	uhg	n n	, vvm	n	uggT	n	. hhg	n	TTTh	n	h	n
)	, mmh , mmh	, whhiP	. Tu	n n	u. vh	n	. hhw	n	Tvhw	n	hP. h	n	V, WW	n
)	uw uw	, whhiv	Tww	n n	uvhw	n	T, uh	n	hhww	n	gmvh	n	muhw	nt
)	uT uT	, whhi, .	hvg	n n	Twww	n	gwww	n	mwww	nt	mwww	nt	mwww	nt
)	uT uT	, whhiug	hvg	n n	Twww	n	gww	n	mwww	nt	, www	nt	, uwww	nt

Tgmm

VW. U

n

P. vg

nt

vuw

1 1	A8 GZ 2: AB tU pc 2GR kTyA	nG t ccc 2 k L	a Hccc 2kL
(, g , mmh	mc	Uc
(, v uu	mv	DU
(, vml uuml	, с	рс
(, vml uhml	, g	рс
(u, uP	Uc	рс

provides the same allowable load capacity as the single pad.

, whhiuw





TwgT

nt

u. nuh

. , **r**uh

(




(sY V


	BSNY O				
F	v- vf on I) d (-	S	4AGv(mmu)p
F	p) vfom I6	I(p	yq((-	S	
F	vd)) I) am(-	S	4AGv(mmuv-
F	py)) I 6	I(p	ma((-	S	
F	vdom) mom l		pq((-	S	4AGv(mmuvd
F	pm)mmr I 6	I(p	-d (-	S	


	i V S		Х		7			
32" x 18.5"	-	-	v(((со	СС	y(((С	
Pad Configuration	Α	-)(((СО	СС	f(((C *	
34" x 22"	-	-	v(((СО	СС	m(((С	
Pad Configuration	Α	-)(((CO	СС	v((((C *	
35" 25.5"	-	-	v(((СО	СС	-(((С	
Pad Configuration	Α	-)(((СО	СС	v)(((C *	

bV i ddd ki dd8 a

YBx BNNL(S7

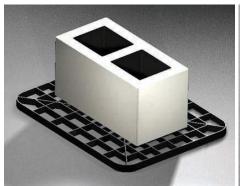

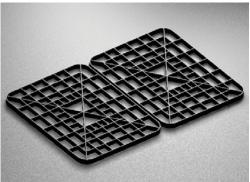

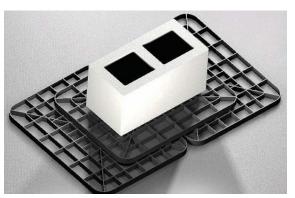

NOLY 8 s8h 00 BSNY NOLY 0 st0 8h 00 BSNYBxN NOLY psV B tpu 00 V pu 00 (s V

) DOLNm

NOBOL NYLV3A3V) DOLNm

OL BNmvdom)) om 4A Gv(mm) v) po) m pvo) m 4A Gv(mm) (
/ cID#1055-26 may not be used in conjunction with metal piers.

VB73ADF) 3Bmk v(((o c c

B7BSB(B mS - 5 5b- pdf c-5 c/) pd; m pvd; m 4AGv(mmu) (- 5 c C. FAR

AGRICULTURE


AGRICULTURE


ONMERCO

No. 23129

OF TE

Jul 14, 2020

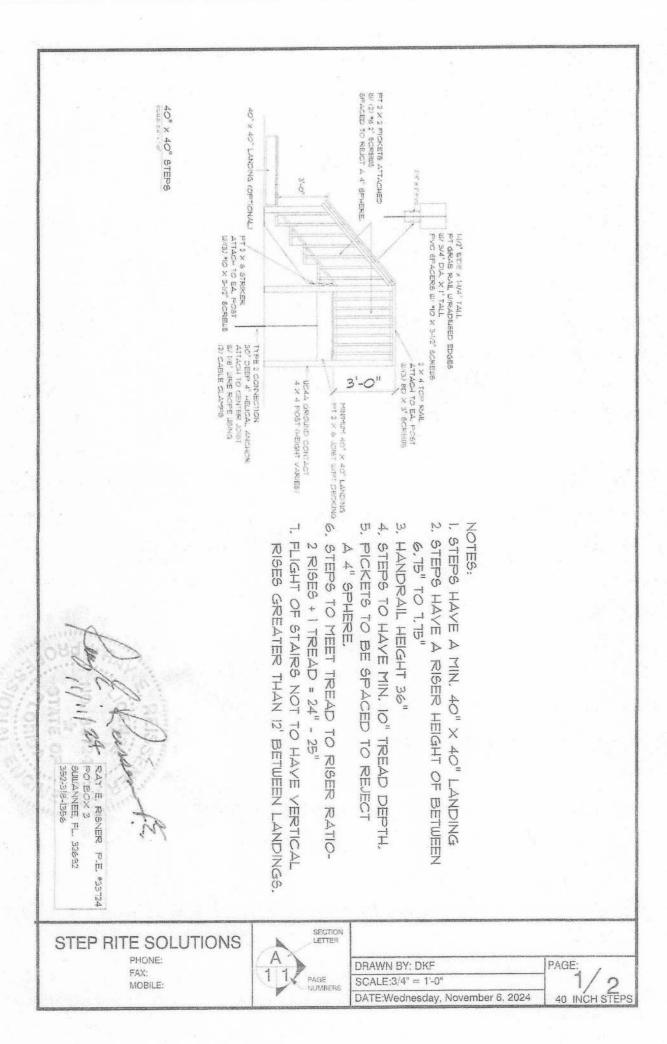

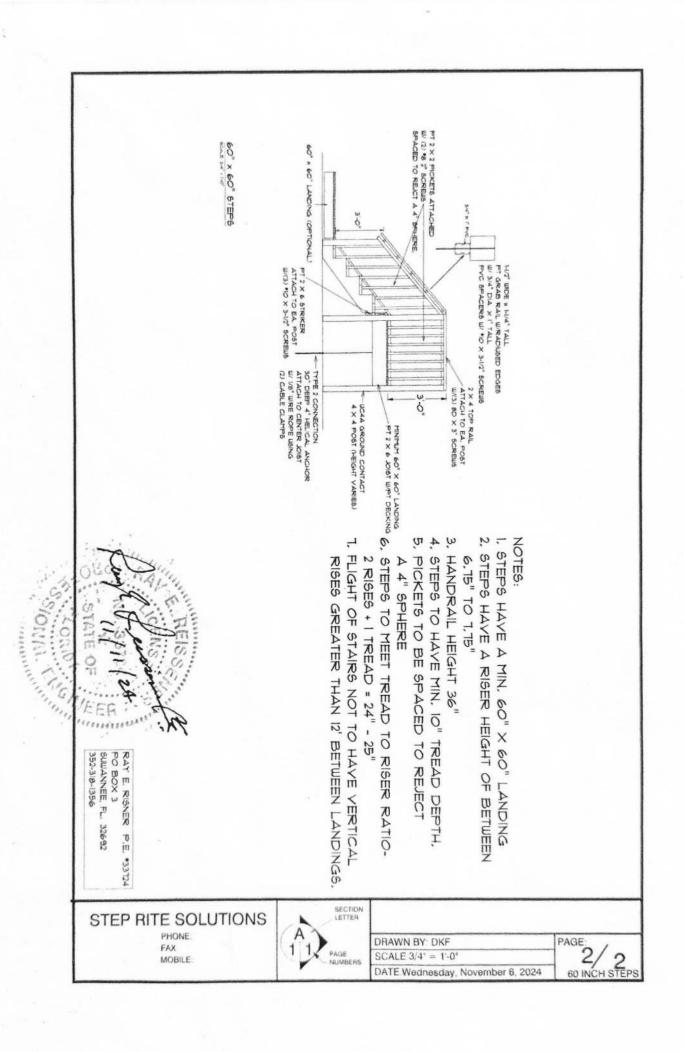

INSTALLATION VERTICAL SKIRTING (WALL SECTION)

- 1. Top back rail will be screwed to bottom of home with 3/4" screw every 16".
- 2. Bottom track will be spiked every 16" with 7" galvanized nail
- ယ Each panel must be installed with required screws. Screws installed in each panel top and bottom every 16".
- Access allowed by any panel.
- ណ Any part of home over 36" from bottom of home to ground will require metal bracing with cross brace. (Bracing requirements 2 x 3 metal brace attached to bottom of home with 3/4" screws and burried in the ground every 4' with cross brace.)

