September 26, 2023

Columbia County Building Department

RE: Permit 48176 - Brian Ruiz

Please change the setup contractor from Brent Strickland License IH 1104218 to David Albright license IH1129420. There are no sub-contractor changes. I am including the contractors authorization and the setup documents including decal.

Sincerely

BKP Permitting, LLC

Sworn to and described before me this 20 day of september

Notary's Signature

PAULA FAYE DAY Notary Public - State of Florida Commission # HH 195322 My Comm. Expires Nov 4, 2025 Bonded through National Notary Assn.



COLUMBIA COUNTY BUILDING DEPARTMENT

135 NE Hernando Ave, Suite B-21, Lake City, FL 32055 Phone: 386-758-1008 Fax: 386-758-2160

MOBILE HOME INSTALLERS AGENT AUTHORIZATION

I, <u>DAUID AIBRIGHT</u>	give this authority	and I do certify that the below
referenced person(s) listed on t	his form is/are under my direct su	upervision and control and
is/are authorized to purchase p	ermits, call for inspections and sig	gn on my behalf.
Printed Name of Authorized Person	Signature of Authorized Person	Agents Company Name
Brody Pack		BKP Permitting LLC
t the license holder realize the	t I am responsible for all permits	nurchased and all work done
•	responsible for compliance with	
Local Ordinances.		
Lunderstand that the State Lice	ensing Board has the power and a	authority to discipline a license
,	by him/her or by his/her authorize	•
	esponsibility for compliance grant	
License Holders Signature (No	tarized) License N	29420 <u>9-12-2023</u> Number Date
NOTARY INFORMATION:		
STATE OF: Florida	COUNTY OF: COLUMN	
The above license holder, who personally appeared before me (type of I.D.)	se name is <u> </u>	Allow 85VH duced identification of Sept , 2023
NOTARY'S SIGNATURE		PAULA FAYE DAY Notary Public - State of Florida Scall Stannington # HH 195322 My Comm. Expires Nov 4, 2025 Bonded through National Notary Assn.

Mobile Home Permit Worksheet

Address of home being installed

Manufacturer

FIBETWOOD

Typical pier spacing

iongitudinal

Installer Dauno

NOTE: if home is a single wide fill out one half of the blocking plan if home is a triple or quad wide sketch in remainder of home I understand Lateral Arm Systems cannot be used on any home (new or used) where the sidewall ties exceed 5 ft 4 in. Show locations of Longitudinal and Lateral Systems (use dark lines to show these locations) WILTON LAKE CILY marriage wall piers within 2' of end Length x width Installer's initials License # 1H-1129420 9 home per Rule 15C 12 FU 32055 31x Application Number: capacity bearing List all marriage wall openings greater than 4 foot and their pier pad sizes below. Load Other pler pad sizes (required by the mfg.) Perimeter pier pad size Single wide New Home Manufacturer Longitudinal Stabilizing Device (LSD) I-beam pier pad size interpolated from Rule 15C-1 pier spacing table. Triple/Quad Double wide Home installed to the Manufacturer's Installation Manual Home is installed in accordance with Rule 15-C Manufacturer Longitudinal Stabilizing Device w/ Lateral Arms 2000 3500 500 000 ps Opening Draw the approximate locations of marriage wall openings 4 foot or greater. Use this symbol to show the piers, psf <u>8</u> (sq in) Footer size TIEDOWN COMPONENTS 16" x 16" PIER PAD SIZES PIER SPACING TABLE FOR USED HOMES 6 (256)Used Home Serial # Installation Decal # Wind Zone II 18 1/2" x 18 Pier pad size 1/2" (342) တ္အတြတ္ပ တ္ တ္ GAFL 807A57886B 20" x 20" Z N (400) Wind Zone III 22" x 22" Longitudinal Marriage wall Shearwall (484)* within 2' of end of home spaced at 5' 4" oc 4 # Sidewall <u>ω</u> ∞_ POPULAR PAD SIZES 7 3/16 x 25 3/16 Date: 13 1/4 x 26 8.5 x 18. Pad Size 16 x 18 OTHER TIES 16 x 16 FRAME TIES x 26 × 24 24" X 24" ANCHORS (576)* 5 † П 26" x 26' (676) 676

Mobile Home Permit Worksheet

Application Number:

Date:

Connect all potable water supply piping to an existing water meter, water tap, or other independent water supply systems. Pg. (1)	Plumbing Connect all sewer drains to an existing sewer tap or septic tank. Pg. 15-25-6	Connect electrical conductors between multi-wide units, but not to the main power source. This includes the bonding wire between mult-wide units. Pg.	Electrical	Date Tested	ALL TESTS MUST BE PERFORMED BY A LICENSED INSTALLER Installer Name	Installer's initials	Note: A state approved lateral arm system is being used and 4 it. anchors are allowed at the sidewall locations. I understand 5 ft anchors are required at all centerline tie points where the torque test reading is 275 or less and where the mobile home manufacturer may requires anchors with 4000 lb./bblding capacity.		TORQUE PROBE TEST The results of the torque probe test is \mathcal{HYS} inch pounds or check here if you are declaring 5' anchors without testing A test showing 275 inch pounds or less will require 5 foot anchors.		×	3. Using 500 lb. increments, take the lowest reading and round down to that increment.	ב. ומגם חום וסמטווע מניחים מיייום מייים חיים וסייים.		POCKET PENETROMETER TESTING METHOD	× ×	or check here to declare 1000 lb. soil A without testing.	unded do	
Installer SignatureDate	manufacturer's installation instructions and or Rule 15C-1 & 2	Installer verifies all information given with this permit worksheet		Drain lines supported at 4 foot intervals. Yes Electrical crossovers protected. Yes Other:	Skirting to be installed. Yes No X Dryer vent installed outside of skirting. Yes N/A A Range downflow vent installed outside of skirting. Yes N/A X	Miscellaneous	The bottomboard will be repaired and/or taped. Yes . Pg. Slding on units is installed to manufacturer's specifications. Yes Fireplace chimney installed so as not to allow intrusion of rain water. Yes	Weatherproofing	Type gasket Installed: Pg Between Floors Yes Between Walls Yes Bottom of ridgebeam Yes	. Ins	a result of a poorly installed or no gasket being installed. I understand a strip of tape will not serve as a gasket.	I understand a properly installed gasket is a requirement of all new and used homes and that condensation, mold, meldew and buckled marriage walls are	Gasket (weatherproofing requirement)	will be centered over the peak of the roof and fastened with galv. roofing nails at 2" on center on both sides of the centerline.	Type Fas	Floor Type Eastener / Length: / Spacing:	Fastening multi wide units	Debris and organic material removed $\frac{1}{2}$ Water drainage: Natural Swale Pad $\frac{1}{2}$ Other	Site Preparation



Florida Mobile Home Installer License

DAVID EALBRIGHT

DEENSENDINGER: 18/1/29/20 EFFECTIVE DATE

09/26/2022

EXPRAINCE DATE:

THE LICENSEE IS HEREBY CERTIFIED UNDER THE PROVISIONS OF SECTION EXECUTE. PLORIDA STATUTES TO CONDUCT AND CARRY ON BUSINESS AS AN INSTALLER OF MORRE BURNES IN THE STATE OF FLORIDA

Kyle Keen, Columbia County Tax Collector

Columbia County Business Tax Receipt \$30.00

YOUR RENEWAL IS DUE BY SEPTEMBER 30, 2022

Account Number: 10507

Business Address: 353 SW MAULDIN AVE

MH SET UP & SERV

Expires Sept. 30, 2023

Tax Amount: Arrears/Penalty: By Sept. 30 Pay:

\$0.00 \$30.00 \$36.00

Ž

After Sept. 30 Pay:

\$33.00 Dec. Oct. \$37.50 \$34.50 Jan. Nov.

DAVID ALBRIGHT MOBILE HOME SVC LLC DAVID ALBRIGHT 353 SW MAULDIN AVE LAKE CITY FL 32024

This BUSINESS TAX RECEIPT does not confirm competency or qualifications to perform the work for which the Tax was paid. A tax has been paid to do business in Columbia County.

0000003000 0000003000 00000000000001050? 1001 L

Manufacturer: FIEE7 WOOD	(Check Size of Home)
Year Model: 2008	Single
Length & Width:	Double
76/80 × 16	Trîple
Type Longitudinal System: OTI (6)	HUD Label #:
Type Lateral Arm System: OTI (6)	Soil Bearing / PSF:
New Home: Used Home: **	Torque Probe / in-lbs:
Data Plate Wind Zone:	Permit #:
	Year Model: 2008 Length & Width: 76/80 8 1 6 Type Longitudinal System: 0 T I (6) New Home: Used Home: X

2、 "1.1.1.1.1" (4) [6] 《 1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1.1	ATE OF FLORIDA ON CERTIFICATION LABEL
103267	
LABEL# DAVID E ALBRIGHT	DATE OF INSTALLATION
NAME IH/112942071	
LICENSE #	5934 ORDER#

INSTRUCTIONS

PLEASE WRITE DATE OF INSTALLATION AND AFFIX LABEL NEXT TO HUD LABEL. USE PERMANENT INK PEN OR MARKER ONLY. COMPLETE INFORMATION ABOVE AND KEEP ON FILE FOR A MINIMUM OF 2 YEARS. YOU ARE REQUIRED TO PROVIDE COPIES WHEN REQUESTED.



. 107

467 Swan Ave ● Hohenwald, TN 38462 ● (800) 284-7437 ● www.olivertechnologies.com ● Fax (931) 796-8811

OLIVER TECHNOLOGIES, INC. INSTALLATION INSTRUCTIONS FOR FLORIDA MODEL 1101 "V" SERIES ALL STEEL FOUNDATION SYSTEM PAN & CONCRETE (revision 5/18)

PATENT# 6634150 & OTHER PATENT PENDING





467 Swan Ave ● Hohenwald, TN 38462 ● (800) 284-7437 ● www.olivertechnologies.com ● Fax (931) 796-8811

OLIVER TECHNOLOGIES, INC. FLORIDA INSTALLATION INSTRUCTIONS FOR THE MODEL 1101 "V" SERIES ALL STEEL FOUNDATION SYSTEM

MODEL 1101"V" (Steps 1-14) **LONGITUDINAL ONLY: Follow Steps 1-9** LATERAL ONLY: Follow Steps 1-3 and Steps 10-14 FOR CONCRETE APPLICATIONS: Follow Steps 15-18

ENGINEERS STAMP

ENGINEERS STAMP

1.50"

SPECIAL CIRCUMSTANCES: If the following conditions occur - STOP! Contact Oliver Technologies at 1-800-284-7437:

a) Pier height exceeds 48"

PIER HEIGHT

- c) Roof eaves exceed 16"
- e) Location is within 1500 feet of coast

- b) length of home exceeds 76'
- d) Sidewall height exceed 96"

INSTALLATION OF GROUND PAN

2. Remove weeds and debris in an approximate two foot square to expose firm soil for each ground pan (C).

1.50"

3. Place ground pan (C) directly below chassis I-beam. Press or drive pan firmly into soil until flush or below soil then install pier per manufacturer's instructions or per Florida Regs.

SPECIAL NOTE: The longitudinal "V" brace system may also serve as a pier under the home and should be loaded as any other pier. It is recommended that after leveling piers, and one-third inch (1/3") before home is lowered completely on to piers, complete steps 4 through 9 below then remove jacks.

INSTALLATION OF LONGITUDINAL "V" BRACE SYSTEM (Model 1101 L "V")


NOTE: WHEN INSTALLING THE LONGITUDINAL SYSTEM ONLY, A MINIMUM OF 2 SYSTEMS PER FLOOR SECTION IS REQUIRED. SOIL TEST PROBE SHOULD BE USED TO DETERMINE CORRECT TYPE OF ANCHOR PER SOIL CLASSIFICATION. IF PROBE TEST READINGS ARE BETWEEN 175 & 275 A 5 FOOT ANCHOR MUST BE USED. IF PROBE TEST READINGS ARE BETWEEN 276 & 350 A 4 FOOT ANCHOR MAY BE USED. USE GROUND ANCHORS WITH DIAGONAL TIES AND STABILIZER PLATES EVERY 5'4". VERTICAL TIES ARE ALSO REQUIRED ON HOMES SUPPLIED WITH VERTICAL TIE CONNECTION POINTS (PER FLORIDA REG.).

4. Choose one of the approved longitudinal tube installations; either Diagram A or B. Then select the correct square tube (E) length from the diagram for appropriate pier height at support location or cut and drill 1.5" square tube to achieve appropriate length.

(40° Min 45° Max.)	Tube Length	Tube Length	
7 3/4" to 25"	22"	18"	
24 3/4" to 32 1 /4"	32"	18"	
33" to 41"	44"	18"	
40" to 48"	54"	18"	

1.25"

Diagram A

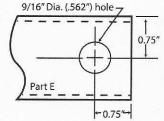

(40° Min 60° Max.)	Tube Length				
14" to 18"	20"				
18" to 25"	28"				
24" to 35"	39"				
30" to 40"	44"				
36" to 48"	54"				

Diagram B

- 5. Install (2) of the 1.50" square tubes (E) into the "U" bracket (J), insert carriage bolt and leave nut loose for final adjustment.
- 6. Place I-beam connector (F) loosely on the bottom flange of the I-beam.
- 7. (For Diagram A installation) Slide the selected 1.25" tube (E) into a 1.50" tube (E) and attach to I-beam connectors (F) and fasten loosely with bolt and nut. (For Diagram B installation) Attach the selected 1.5" tubes (E) to the I-beam connectors (F) and fasten loosely with bolts and nuts.
- 8. Repeat steps 6 through 7 to create the "V" pattern of the square tubes loosely in place.
- 9. Using standard hand tools tighten all nuts and bolts. (For Diagram A installation only, secure 1.25" and 1.50" tubes using four(4) 1 /4"-14 x 3/4" self-tapping screws in pre-drilled holes.)

INSTALLATION OF LATERAL TELESCOPING TRANSVERSE ARM SYSTEM (Model 1101 T "V")

THE MODEL 1101 "V" (LONGITUDINAL & LATERAL PROTECTION) ELIMINATES THE NEED FOR STABILIZER PLATES & FRAME TIES. NOTE: THE USE OF THIS SYSTEM REQUIRES VERTICAL TIES SPACED AT 5'4".

FOUR FOOT (4') GROUND ANCHOR MAY BE USED EXCEPT WHERE THE HOME MANUFACTURER SPECIFIES DIFFERENT.

- 10. Install remaining vertical tie-down straps and 4' ground anchors per home manufacturer's instructions. NOTE: Centerline anchors to be sized according to soil torque condition. Any manufacturer's specifications for sidewall anchor loads in excess of 4,000 lbs. require a 5' anchor per Florida Code.
- 11. Select the correct square tube brace (H) length for set-up lateral transverse at support location. The lengths come in either 60" or 72" lengths. (With the 1.50" tube as the bottom tube, and the 1.25" tube as the inserted tube.)
- 12. Install the 1.50 transverse brace (H) to the ground pan connector (D) with bolt and nut.
- 13. Slide 1.25" transverse brace into the 1.50" brace and attach to adjacent I-beam connector (I) with bolt and nut.
- 14. Secure 1.50" transverse arm to 1.25" transverse arm using four (4) 1 /4" 14 x 3/4" self-tapping screws in pre-drilled holes.

Page

DUNIER Technologies, Inc.



467 Swan Ave ● Hohenwald, TN 38462 ● (800) 284-7437 ● www.olivertechnologies.com ● Fax (931) 796-8811

INSTALLATION USING CONCRETE RUNNER/ FOOTER

- 15. A concrete runner, footer or slab may be used in place of the steel ground pan.
 - a) The concrete shall be minimum 2500 psi mix
 - b) A concrete runner may be either longitudinal or transverse, and must be a minimum of 8" deep with a minimum width of 16 inches longitudinally or 18 inches transverse to allow proper distance between the concrete bolt and the edge of the concrete (see below).
 - c) Footers must have minimum surface area of 441 sq. in. (I.e. 21" square), and must be a minimum of 8" deep.
 - d) If a full slab is used, the depth must be a 4" minimum . Special inspection of the system bracket installation is not required. Footers must allow for at least 4" from the concrete bolt to the edge of the concrete.

NOTE: The bottom of all footings, pads, slabs and runners must be per local jurisdiction.

LONGITUDINAL: (Model 1101 LC "V")

16. When using Part# 1101-W-CPCA (wetset) simply install the bracket in runner/footer OR When installing in cured concrete use Part# 101-D-CPCA (dryset). The 1101 (dryset) CA bracket is attached to the concrete using (2) 5/8"x3" concrete wedge bolts (Simpson part # S162300H 5/8" X 3" or Powers equivalent). Place the CA bracket in desired location. Mark bolt hole locations, then using a 5/8" diameter masonry bit, drill a hole to a minimum depth of 3". Make sure all dust and concrete is blown out of the holes. Place wedge bolts into drille holes, then place 1101 (dry set) CA bracket onto wedge bolts and start wedge bolt nuts. Take a hammer and lightly drive the wedge bolts down by hitting the nut (making sure not to hit the top of threads on bolt). The sleeve of concrete wedge bolt needs to be at or below th top of concrete. Complete by tightening nuts.


LATERAL: (Model 1101 TC "V")


- 17. For wet set (part # 1101-W-TACA) installation simply install the anchor bolt into runner/footer. For dry set installation (part # 1101-D-TACA) mark bolt hole locations, then using a 5/8" diam. masonry bit. drill a hole to a minimum depth of 3". Make sure all dust and concrete is blown out of the hole. Place wedge bolts (Simpson part #S162300H 5/8" X 3" or Powers equivalent) into (D) concrete dry transverse connector and into drilled hole. If needed, take a hammer and lightly drive the wedge bolts down by hitting the nut (making sure not to hit the top of threads on bolt), then remove the nut. The sleeve of concrete wedge bolt needs to be at or below the top of concrete.
- 18. When using part# 1101 CVW (wetset) or 1101 CVD (dryset), install per steps 17 & 18.


Notes:

- 1. LENGTH OF HOUSE IS THE ACTUAL BOX SIZE
- 2. —= LOCATION OF TRANSVERSE BRACING ONLY
- 3 🛛 = LOCATION OF LONGITUDINAL BRACING ONLY
- 4. F- = TRANSVERSE AND LONGITUDINAL LOCATIONS


ALL WIDTHS AND LENGTHS UP TO 52'




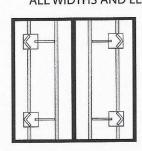


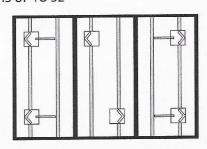

ALL WIDTHS AND LENGTHS OVER 52' TO 80"




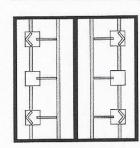

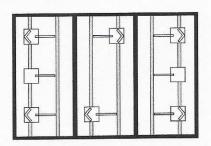

HOMES WITH 5/12 ROOF PITCH REQUIRE: PER FLORIDA REGULATIONS 6 systems for home lengths up to 52' and 8 systems for homes over 52' and up 80'.

PATENT# 6634150 & OTHER PATENT PENDING

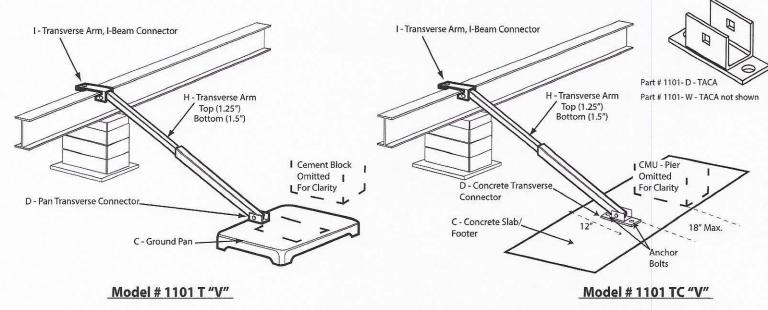

Florida approved 4' ground anchors may be used in all locations except where home manufacturers specifications for sidewall straps are in excess of 4,000 lbs. These locations require a 5' anchor. Per Florida code.

C = GROUND PAN / CONCRETE FOOTER OR RUNNER

D = GROUND PAN / CONCRETE U BRACKETS TRANSVERSE CONNECTOR (connects with grade 5 - 1/2" x 2" 1/2" carriage bolt and nut)


E = TELESCOPING V BRACE TUBE ASSEMBLY (1.5" TUBE BOTTOM AND 1.25" TUBE INSERT) OR 1.5" TUBE

F = "V" BRACE I-BEAM CONNECTOR ASSEMBLY

H = TELESCOPING TRANSVERSE ARM ASSEMBLY

I = TRANSVERSE ARM I-BEAM CONNECTOR (connects with grade 5 - 1/2" x 2" 1/2" carriage bolt and nut)

J = V PAN BRACKET (connects with grade 5 - 1/2" x 2" 1/2" carriage bolt and nut)

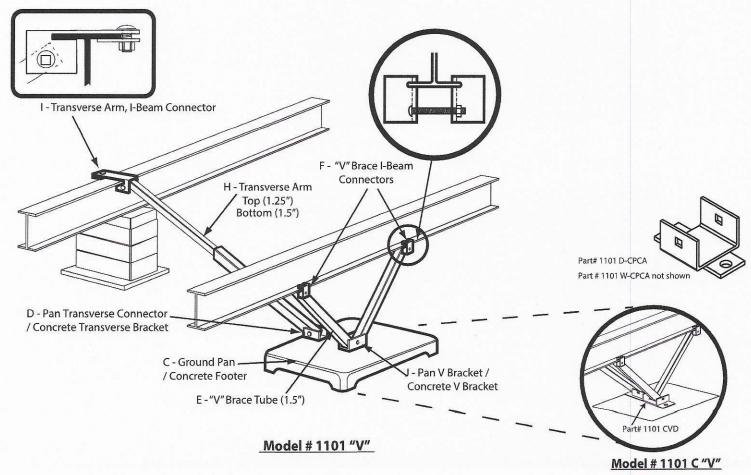



State of Florida DEPARTMENT OF HIGHWAY SAFETY AND MOTOR VEHICLES

TALLAHASSEE, FLORIDA 32399-0500

FRED O. DICKINSON, III

October 27, 1999

Mr. Lon Larson, General Manager
Manufactured Housing Foundation Systems
A Division of Oliver Technologies
562 Glenheather Drive
San Marcos, California 92069

Dear Mr. Larson:

We wish to acknowledge receipt of your print specifications and test results certifying your Adjustable Outrigger listed below complies with the Federal Manufactured Construction and Safety Standards, § 3280.305 and § 3280.401 and with the rules and regulations set forth by the Department of Highway Safety and Motor Vehicles, Florida Administrative Rule Code 15C-1.01105.

Based on the information submitted to the bureau, the following product is listed for use in Florida when the installation instructions showing the way the outrigger was tested, are provided.

MODEL#	INDENTIFICATION	DESCRIPTION
1055-11	Adjustable Outrigger	Bracket, Pipe, & Screw Adjustment

NOTE: The outrigger was tested on September 19, 1999, for an allowable load of 1700 pounds.

If you have any questions, please advise at (850) 413-7600.

Sincerely,

Phil Bergelt, Program Manager
Bureau of Mobile Home and

Recreational Vehicle Construction


Division of Motor Vehicles

PB:bsc

OLIVER TECHNOLOGIES, INC.

Adjustable Outrigger Installation Instructions MODEL # 1055-11

- 1. Locate the floor joist that requires support.
- 2. Mark the I-Beam directly under the floor joist to align the outrigger.
- 3. Adjust the nut on the threaded rod so it clears the frame flange for easy adjustment.
- 4. Set the threaded rod in the pipe and against the frame.
- 5. Set the notched end of the thrust bracket into the end of the pipe and secure it with 5 # 12 x 2" screws to the floor joist. The thrust bracket should be approximately 6" from the outside rim joist.
- 6. Bottom board and insulation should be between the bracket and the joist.
- 7. For minor adjustments align the door and window openings by tightening or loosening the adjustment nut. For all other adjustments use a hydraulic jack to raise the floor joist before installation of the outrigger.

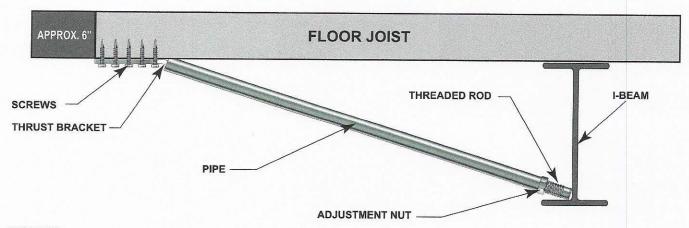

NOTES:

*REMOVE OUTRIGGER WHEN HOME IS BEING TRANSPORTED

*SPECIFY WIDTH OF HOME WHEN ORDERING OUTRIGGER. PIPE MAY BE CUT TO FIT

*THE ADJUSTABLE OUTRIGGERS SHALL ONLY BE USED ON HOMES FOR OPENINGS UP TO:

Listing # 1055-11 Patent # 6.334.279

6' ON 20 LB ROOF LOAD

4' ON 30 LB ROOF LOAD

3' ON 40 LB ROOF LOAD

*WHEN ADJUSTABLE OUTRIGGERS ARE USED FOR DOOR AND WINDOW SUPPORTS, THEY MUST BE INSTALLED ON THE CLOSEST FLOOR JOIST UP TO 16" FROM THE OUTSIDE EDGE OF THE OPENING

*DO NOT INSTALL ADJUSTABLE OUTRIGGER AT LOCATIONS WHERE THE HOME MANUFACTURER INDICATES A LOAD IN EXCESS OF 1,700 LBS.
*THE ADJUSTABLE OUTRIGGER MUST BE USED ON A MINIMUM 10" I-BEAM AND BE PLACED WITHIN 4' OF A MAIN FRAME SUPPORT PIER OR FRAME CROSSMEMBER.

Horsia Building Code

Residential Section

R311 and R312

SINRETAINS

R311.7.2 Headroom

R311.7.5.1 Riser Height

R311.7.5.2 Tread Depth

R3117.8 Handralls


R311_7.B.2 Continuity

R311.7.8.3 Handrail Grip Size

R312.1.2 Guards

R312.1.3 Guard Opening Limits

Nenciscular Handreil

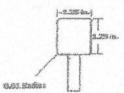

bourgipulli final de part cheurine remut Levre de graffinalise of 4 ML Film and c. 25 ML film white a comme reasique cheumalise of 2.20 Mathew

